

B0004 PCM Discrete Input Speed Signal Not Present  
B0005 In Park Switch Circuit Malfunction  
B0016 RF/Passenger Frontal Deployment Loop (Single Stage or Stage 1) Resistance Low  
B0017 RF/Passenger Frontal Deployment Loop (Single Stage or Stage 1) Open  
B0018 RF/Passenger Frontal Deployment Loop (Single Stage or Stage 1) Short to Ground/Voltage Out of Range  
B0022 LF/Driver Frontal Deployment Loop (Single Stage or Stage 1) Resistance Low  
B0024 LF/Driver Frontal Deployment Loop (Single Stage or Stage 1) Short to Ground/Voltage Out of Range  
B0026 LF/Driver Frontal Deployment Loop (Single Stage or Stage 1) Open  
B0028 RF/Passenger Side Deployment Loop Resistance Low  
B0029 RF/Passenger Side Deployment Loop Open  
B0030 RF/Passenger Side Deployment Loop Short to Ground/Voltage Out of Range  
B0035 ADS Closed/Shorted to Ground  
B0036 ADS Open/Missing/Shorted to Battery  
B0037 AUX switch closed/shorted to ground  
B0038 AUX switch open/shorted to battery  
B0040 LF/Driver Side Deployment Loop Resistance Low  
B0041 LF/Driver Side Deployment Loop Open  
B0045 LF Side Deploy Loop Short to Ground/Voltage Out of Range  
B0051 Deployment Commanded  
B0053 Deployment Commanded with Loop Malfunctions Present  
B0057 RF/Passenger Pretensioner Deployment Loop Resistance Low  
B0058 RF/Passenger Pretensioner Deployment Loop Open  
B0059 RF/Passenger Pretensioner Deployment Loop Short to Ground/Voltage Out of Range  
B0064 LF/Driver Pretensioner Deployment Loop Resistance Low  
B0065 LF/Driver Pretensioner Deployment Loop Open  
B0066 LF/Driver Pretensioner Deployment Loop Short to Ground/Voltage Out of Range  
B0073 Supplemental Deployment Loop #1 Resistance Low  
B0074 Supplemental Deployment Loop #1 Open  
B0075 Supplemental Deployment Loop #1 Short to Ground/Voltage Out of Range  
B0077 LF/Driver SIS Malfunction  
B0078 RF/Passenger SIS Malfunction  
B0079 Incorrect LF/Driver SIS Installed  
B0080 Discard LF/Driver SIS  
B0081 Incorrect RF/Passenger SIS Installed  
B0082 Discard RF/Passenger SIS  
B0086 Supplemental Deployment Loop #2 Resistance Low  
B0087 Supplemental Deployment Loop #2 Open  
B0088 Supplemental Deployment Loop #2 Short to Ground/Voltage Out of Range  
B0090 Active switch voltage out of range  
B0091 Active switch: wrong state  
B0092 PPS passenger detection error  
B0093 PPS/CPS self-test malfunction  
B0094 CPS childseat detection error  
B0095 SDM-PPS/CPS mismatch malfunction  
B0126 Right Panel Discharge Temperature Fault  
B0131 Right Heater Discharge Temperature Fault  
B0159 Outside Air Temperature Sensor Circuit Range/Performance  
B0164 Passenger Compartment Temperature Sensor #1 (Single Sensor or LH) Circuit Range/Performance  
B0169 In-car Temp Sensor Failure (passenger -not used)  
B0174 Output Air Temperature Sensor #1 (Upper; Single or LH) Circuit Range/Performance  
B0179 Output Air Temperature Sensor #2 (Lower; Single or LH) Circuit Range/Performance  
B0184 Solar Load Sensor #1 CKT Range  
B0189 Solar Load Sensor #2 CKT Range  
B0248 Mode Door Inoperative Error  
B0249 Heater/Defrost/AC Door Range Error  
B0268 A/I Door Inoperative Error  
B0269 Air Inlet Door Range Error  
B0408 Temperature Control #1 (Main/Front) Circuit Malfunction  
B0409 Air Mix Door #1 Range Error  
B0419 Air Mix Door #2 Range Error  
B0423 Air Mix Door #2 Inoperative Error  
B0428 Air Mix Door #3 Inoperative Error  
B0429 Temperature Control #3 Rear Circuit Range/Performance  
B0510 RH Panel Discharge Temp Sensor Failure  
B0515 RH Heater Discharge Temp Sensor Failure  
B0520 Rear Discharge Temp Sensor Failure  
B0530 Fuel Level Sensor Stuck  
B0532 Fuel Sensor Shorted To Ground  
B0533 Fuel Sensor Open/Shorted To B+  
B0688 Security System Indicator Circuit High

B0768 Service Indicator Circuit High  
B0846 +5 Volt Reference Out of Range  
B0856 Battery 2 Out of Range  
P0001 Fuel Volume Regulator Control Circuit/Open  
P0002 Fuel Volume Regulator Control Circuit Range/Performance  
P0003 Fuel Volume Regulator Control Circuit Low  
P0004 Fuel Volume Regulator Control Circuit High  
P0005 Fuel Shutoff Valve "A" Control Circuit/Open  
P0006 Fuel Shutoff Valve "A" Control Circuit Low  
P0007 Fuel Shutoff Valve "A" Control Circuit High  
P0008 Engine Position System Performance  
P0009 Engine Position System Performance  
P0010 "A" Camshaft Position Actuator Circuit  
P0011 "A" Camshaft Position - Timing Over-Advanced or System Performance  
P0012 "A" Camshaft Position - Timing Over-Retarded  
P0013 "B" Camshaft Position - Actuator Circuit  
P0014 "B" Camshaft Position - Timing Over-Advanced or System Performance  
P0015 "B" Camshaft Position - Timing Over-Retarded  
P0016 Crankshaft Position - Camshaft Position Correlation  
P0017 Crankshaft Position - Camshaft Position Correlation  
P0018 Crankshaft Position - Camshaft Position Correlation  
P0019 Crankshaft Position - Camshaft Position Correlation  
P0020 "A" Camshaft Position Actuator Circuit  
P0021 "A" Camshaft Position - Timing Over-Advanced or System Performance  
P0022 "A" Camshaft Position - Timing Over-Retarded  
P0023 "B" Camshaft Position - Actuator Circuit  
P0024 "B" Camshaft Position - Timing Over-Advanced or System Performance  
P0025 "B" Camshaft Position - Timing Over-Retarded  
P0026 Intake Valve Control Solenoid Circuit Range/Performance  
P0027 Exhaust Valve Control Solenoid Circuit Range/Performance  
P0028 Intake Valve Control Solenoid Circuit Range/Performance  
P0029 Exhaust Valve Control Solenoid Circuit Range/Performance  
P0030 HO2S Heater Control Circuit  
P0031 HO2S Heater Control Circuit Low  
P0032 HO2S Heater Control Circuit High  
P0033 Turbo Charger Bypass Valve Control Circuit  
P0034 Turbo Charger Bypass Valve Control Circuit Low  
P0035 Turbo Charger Bypass Valve Control Circuit High  
P0036 HO2S Heater Control Circuit  
P0037 HO2S Heater Control Circuit Low  
P0038 HO2S Heater Control Circuit High  
P0039 Turbo/Super Charger Bypass Valve Control Circuit Range/Performance  
P0040 O2 Sensor Signals Swapped Bank 1 Sensor 1/ Bank 2 Sensor 1  
P0041 O2 Sensor Signals Swapped Bank 1 Sensor 2/ Bank 2 Sensor 2  
P0042 HO2S Heater Control Circuit  
P0043 HO2S Heater Control Circuit Low  
P0044 HO2S Heater Control Circuit High  
P0045 Turbo/Super Charger Boost Control Solenoid Circuit/Open  
P0046 Turbo/Super Charger Boost Control Solenoid Circuit Range/Performance  
P0047 Turbo/Super Charger Boost Control Solenoid Circuit Low  
P0048 Turbo/Super Charger Boost Control Solenoid Circuit High  
P0049 Turbo/Super Charger Turbine Overspeed  
P0050 HO2S Heater Control Circuit  
P0051 HO2S Heater Control Circuit Low  
P0052 HO2S Heater Control Circuit High  
P0053 HO2S Heater Resistance  
P0054 HO2S Heater Resistance  
P0055 HO2S Heater Resistance  
P0056 HO2S Heater Control Circuit  
P0057 HO2S Heater Control Circuit Low  
P0058 HO2S Heater Control Circuit High  
P0059 HO2S Heater Resistance  
P0060 HO2S Heater Resistance  
P0061 HO2S Heater Resistance  
P0062 HO2S Heater Control Circuit  
P0063 HO2S Heater Control Circuit Low  
P0064 HO2S Heater Control Circuit High  
P0065 Air Assisted Injector Control Range/Performance  
P0066 Air Assisted Injector Control Circuit or Circuit Low  
P0067 Air Assisted Injector Control Circuit High

P0068 MAP/MAF - Throttle Position Correlation  
P0069 Manifold Absolute Pressure - Barometric Pressure Correlation  
P0070 Ambient Air Temperature Sensor Circuit  
P0071 Ambient Air Temperature Sensor Range/Performance  
P0072 Ambient Air Temperature Sensor Circuit Low  
P0073 Ambient Air Temperature Sensor Circuit High  
P0074 Ambient Air Temperature Sensor Circuit Intermittent  
P0075 Intake Valve Control Solenoid Circuit  
P0076 Intake Valve Control Solenoid Circuit Low  
P0077 Intake Valve Control Solenoid Circuit High  
P0078 Exhaust Valve Control Solenoid Circuit  
P0079 Exhaust Valve Control Solenoid Circuit Low  
P0080 Exhaust Valve Control Solenoid Circuit High  
P0081 Intake Valve Control Solenoid Circuit  
P0082 Intake Valve Control Solenoid Circuit Low  
P0083 Intake Valve Control Solenoid Circuit High  
P0084 Exhaust Valve Control Solenoid Circuit  
P0085 Exhaust Valve Control Solenoid Circuit Low  
P0086 Exhaust Valve Control Solenoid Circuit High  
P0087 Fuel Rail/System Pressure - Too Low  
P0088 Fuel Rail/System Pressure - Too High  
P0089 Fuel Pressure Regulator 1 Performance  
P0090 Fuel Pressure Regulator 1 Control Circuit  
P0091 Fuel Pressure Regulator 1 Control Circuit Low  
P0092 Fuel Pressure Regulator 1 Control Circuit High  
P0093 Fuel System Leak Detected - Large Leak  
P0094 Fuel System Leak Detected - Small Leak  
P0095 Intake Air Temperature Sensor 2 Circuit  
P0096 Intake Air Temperature Sensor 2 Circuit Range/Performance  
P0097 Intake Air Temperature Sensor 2 Circuit Low  
P0098 Intake Air Temperature Sensor 2 Circuit High  
P0099 Intake Air Temperature Sensor 2 Circuit Intermittent/Erratic  
P0100 Mass or Volume Air Flow Circuit  
P0101 Mass or Volume Air Flow Circuit Range/Performance  
P0102 Mass or Volume Air Flow Circuit Low Input  
P0103 Mass or Volume Air Flow Circuit High Input  
P0104 Mass or Volume Air Flow Circuit Intermittent  
P0105 Manifold Absolute Pressure/Barometric Pressure Circuit  
P0106 Manifold Absolute Pressure/Barometric Pressure Circuit Range/Performance  
P0107 Manifold Absolute Pressure/Barometric Pressure Circuit Low Input  
P0108 Manifold Absolute Pressure/Barometric Pressure Circuit High Input  
P0109 Manifold Absolute Pressure/Barometric Pressure Circuit Intermittent  
P0110 Intake Air Temperature Sensor 1 Circuit  
P0111 Intake Air Temperature Sensor 1 Circuit Range/Performance  
P0112 Intake Air Temperature Sensor 1 Circuit Low  
P0113 Intake Air Temperature Sensor 1 Circuit High  
P0114 Intake Air Temperature Sensor 1 Circuit Intermittent  
P0115 Engine Coolant Temperature Circuit  
P0116 Engine Coolant Temperature Circuit Range/Performance  
P0117 Engine Coolant Temperature Circuit Low  
P0118 Engine Coolant Temperature Circuit High  
P0119 Engine Coolant Temperature Circuit Intermittent  
P0120 Throttle/Pedal Position Sensor/Switch "A" Circuit  
P0121 Throttle/Pedal Position Sensor/Switch "A" Circuit Range/Performance  
P0122 Throttle/Pedal Position Sensor/Switch "A" Circuit Low  
P0123 Throttle/Pedal Position Sensor/Switch "A" Circuit High  
P0124 Throttle/Pedal Position Sensor/Switch "A" Circuit Intermittent  
P0125 Insufficient Coolant Temperature for Closed Loop Fuel Control  
P0126 Insufficient Coolant Temperature for Stable Operation  
P0127 Intake Air Temperature Too High  
P0128 Coolant Thermostat (Coolant Temperature Below Thermostat Regulating Temperature)  
P0129 Barometric Pressure Too Low  
P0130 O2 Sensor Circuit  
P0131 O2 Sensor Circuit Low Voltage  
P0132 O2 Sensor Circuit High Voltage  
P0133 O2 Sensor Circuit Slow Response  
P0134 O2 Sensor Circuit No Activity Detected  
P0135 O2 Sensor Heater Circuit  
P0136 O2 Sensor Circuit  
P0137 O2 Sensor Circuit Low Voltage

P0138	O2 Sensor Circuit High Voltage
P0139	O2 Sensor Circuit Slow Response
P0140	O2 Sensor Circuit No Activity Detected
P0141	O2 Sensor Heater Circuit
P0142	O2 Sensor Circuit
P0143	O2 Sensor Circuit Low Voltage
P0144	O2 Sensor Circuit High Voltage
P0145	O2 Sensor Circuit Slow Response
P0146	O2 Sensor Circuit No Activity Detected
P0147	O2 Sensor Heater Circuit
P0148	Fuel Delivery Error
P0149	Fuel Timing Error
P0150	O2 Sensor Circuit
P0151	O2 Sensor Circuit Low Voltage
P0152	O2 Sensor Circuit High Voltage
P0153	O2 Sensor Circuit Slow Response
P0154	O2 Sensor Circuit No Activity Detected
P0155	O2 Sensor Heater Circuit
P0156	O2 Sensor Circuit
P0157	O2 Sensor Circuit Low Voltage
P0158	O2 Sensor Circuit High Voltage
P0159	O2 Sensor Circuit Slow Response
P0160	O2 Sensor Circuit No Activity Detected
P0161	O2 Sensor Heater Circuit
P0162	O2 Sensor Circuit
P0163	O2 Sensor Circuit Low Voltage
P0164	O2 Sensor Circuit High Voltage
P0165	O2 Sensor Circuit Slow Response
P0166	O2 Sensor Circuit No Activity Detected
P0167	O2 Sensor Heater Circuit
P0168	Fuel Temperature Too High
P0169	Incorrect Fuel Composition
P0170	Fuel Trim
P0171	System Too Lean
P0172	System Too Rich
P0173	Fuel Trim
P0174	System Too Lean
P0175	System Too Rich
P0176	Fuel Composition Sensor Circuit
P0177	Fuel Composition Sensor Circuit Range/Performance
P0178	Fuel Composition Sensor Circuit Low
P0179	Fuel Composition Sensor Circuit High
P0180	Fuel Temperature Sensor A Circuit
P0181	Fuel Temperature Sensor A Circuit Range/Performance
P0182	Fuel Temperature Sensor A Circuit Low
P0183	Fuel Temperature Sensor A Circuit High
P0184	Fuel Temperature Sensor A Circuit Intermittent
P0185	Fuel Temperature Sensor B Circuit
P0186	Fuel Temperature Sensor B Circuit Range/Performance
P0187	Fuel Temperature Sensor B Circuit Low
P0188	Fuel Temperature Sensor B Circuit High
P0189	Fuel Temperature Sensor B Circuit Intermittent
P0190	Fuel Rail Pressure Sensor Circuit
P0191	Fuel Rail Pressure Sensor Circuit Range/Performance
P0192	Fuel Rail Pressure Sensor Circuit Low
P0193	Fuel Rail Pressure Sensor Circuit High
P0194	Fuel Rail Pressure Sensor Circuit Intermittent
P0195	Engine Oil Temperature Sensor
P0196	Engine Oil Temperature Sensor Range/Performance
P0197	Engine Oil Temperature Sensor Low
P0198	Engine Oil Temperature Sensor High
P0199	Engine Oil Temperature Sensor Intermittent
P0200	Injector Circuit/Open
P0201	Injector Circuit/Open - Cylinder 1
P0202	Injector Circuit/Open - Cylinder 2
P0203	Injector Circuit/Open - Cylinder 3
P0204	Injector Circuit/Open - Cylinder 4
P0205	Injector Circuit/Open - Cylinder 5
P0206	Injector Circuit/Open - Cylinder 6
P0207	Injector Circuit/Open - Cylinder 7

P0208 Injector Circuit/Open - Cylinder 8  
P0209 Injector Circuit/Open - Cylinder 9  
P0210 Injector Circuit/Open - Cylinder 10  
P0211 Injector Circuit/Open - Cylinder 11  
P0212 Injector Circuit/Open - Cylinder 12  
P0213 Cold Start Injector 1  
P0214 Cold Start Injector 2  
P0215 Engine Shutoff Solenoid  
P0216 Injector/Injection Timing Control Circuit  
P0217 Engine Coolant Over Temperature Condition  
P0218 Transmission Fluid Over Temperature Condition  
P0219 Engine Overspeed Condition  
P0220 Throttle/Pedal Position Sensor/Switch "B" Circuit  
P0221 Throttle/Pedal Position Sensor/Switch "B" Circuit Range/Performance  
P0222 Throttle/Pedal Position Sensor/Switch "B" Circuit Low  
P0223 Throttle/Pedal Position Sensor/Switch "B" Circuit High  
P0224 Throttle/Pedal Position Sensor/Switch "B" Circuit Intermittent  
P0225 Throttle/Pedal Position Sensor/Switch "C" Circuit  
P0226 Throttle/Pedal Position Sensor/Switch "C" Circuit Range/Performance  
P0227 Throttle/Pedal Position Sensor/Switch "C" Circuit Low  
P0228 Throttle/Pedal Position Sensor/Switch "C" Circuit High  
P0229 Throttle/Pedal Position Sensor/Switch "C" Circuit Intermittent  
P0230 Fuel Pump Primary Circuit  
P0231 Fuel Pump Secondary Circuit Low  
P0232 Fuel Pump Secondary Circuit High  
P0233 Fuel Pump Secondary Circuit Intermittent  
P0234 Turbo/Super Charger Overboost Condition  
P0235 Turbo/Super Charger Boost Sensor "A" Circuit  
P0236 Turbo/Super Charger Boost Sensor "A" Circuit Range/Performance  
P0237 Turbo/Super Charger Boost Sensor "A" Circuit Low  
P0238 Turbo/Super Charger Boost Sensor "A" Circuit High  
P0239 Turbo/Super Charger Boost Sensor "B" Circuit  
P0240 Turbo/Super Charger Boost Sensor "B" Circuit Range/Performance  
P0241 Turbo/Super Charger Boost Sensor "B" Circuit Low  
P0242 Turbo/Super Charger Boost Sensor "B" Circuit High  
P0243 Turbo/Super Charger Wastegate Solenoid "A"  
P0244 Turbo/Super Charger Wastegate Solenoid "A" Range/Performance  
P0245 Turbo/Super Charger Wastegate Solenoid "A" Low  
P0246 Turbo/Super Charger Wastegate Solenoid "A" High  
P0247 Turbo/Super Charger Wastegate Solenoid "B"  
P0248 Turbo/Super Charger Wastegate Solenoid "B" Range/Performance  
P0249 Turbo/Super Charger Wastegate Solenoid "B" Low  
P0250 Turbo/Super Charger Wastegate Solenoid "B" High  
P0251 Injection Pump Fuel Metering Control "A" (Cam/Rotor/Injector)  
P0252 Injection Pump Fuel Metering Control "A" Range/Performance (Cam/Rotor/Injector)  
P0253 Injection Pump Fuel Metering Control "A" Low (Cam/Rotor/Injector)  
P0254 Injection Pump Fuel Metering Control "A" High (Cam/Rotor/Injector)  
P0255 Injection Pump Fuel Metering Control "A" Intermittent (Cam/Rotor/Injector)  
P0256 Injection Pump Fuel Metering Control "B" (Cam/Rotor/Injector)  
P0257 Injection Pump Fuel Metering Control "B" Range/Performance (Cam/Rotor/Injector)  
P0258 Injection Pump Fuel Metering Control "B" Low (Cam/Rotor/Injector)  
P0259 Injection Pump Fuel Metering Control "B" High (Cam/Rotor/Injector)  
P0260 Injection Pump Fuel Metering Control "B" Intermittent (Cam/Rotor/Injector)  
P0261 Cylinder 1 Injector Circuit Low  
P0262 Cylinder 1 Injector Circuit High  
P0263 Cylinder 1 Contribution/Balance  
P0264 Cylinder 2 Injector Circuit Low  
P0265 Cylinder 2 Injector Circuit High  
P0266 Cylinder 2 Contribution/Balance  
P0267 Cylinder 3 Injector Circuit Low  
P0268 Cylinder 3 Injector Circuit High  
P0269 Cylinder 3 Contribution/Balance  
P0270 Cylinder 4 Injector Circuit Low  
P0271 Cylinder 4 Injector Circuit High  
P0272 Cylinder 4 Contribution/Balance  
P0273 Cylinder 5 Injector Circuit Low  
P0274 Cylinder 5 Injector Circuit High  
P0275 Cylinder 5 Contribution/Balance  
P0276 Cylinder 6 Injector Circuit Low  
P0277 Cylinder 6 Injector Circuit High

P0278 Cylinder 6 Contribution/Balance  
P0279 Cylinder 7 Injector Circuit Low  
P0280 Cylinder 7 Injector Circuit High  
P0281 Cylinder 7 Contribution/Balance  
P0282 Cylinder 8 Injector Circuit Low  
P0283 Cylinder 8 Injector Circuit High  
P0284 Cylinder 8 Contribution/Balance  
P0285 Cylinder 9 Injector Circuit Low  
P0286 Cylinder 9 Injector Circuit High  
P0287 Cylinder 9 Contribution/Balance  
P0288 Cylinder 10 Injector Circuit Low  
P0289 Cylinder 10 Injector Circuit High  
P0290 Cylinder 10 Contribution/Balance  
P0291 Cylinder 11 Injector Circuit Low  
P0292 Cylinder 11 Injector Circuit High  
P0293 Cylinder 11 Contribution/Balance  
P0294 Cylinder 12 Injector Circuit Low  
P0295 Cylinder 12 Injector Circuit High  
P0296 Cylinder 12 Contribution/Balance  
P0297 Vehicle Overspeed Condition  
P0298 Engine Oil Over Temperature  
P0299 Turbo/Super Charger Underboost  
P0300 Random/Multiple Cylinder Misfire Detected  
P0301 Cylinder 1 Misfire Detected  
P0302 Cylinder 2 Misfire Detected  
P0303 Cylinder 3 Misfire Detected  
P0304 Cylinder 4 Misfire Detected  
P0305 Cylinder 5 Misfire Detected  
P0306 Cylinder 6 Misfire Detected  
P0307 Cylinder 7 Misfire Detected  
P0308 Cylinder 8 Misfire Detected  
P0309 Cylinder 9 Misfire Detected  
P0310 Cylinder 10 Misfire Detected  
P0311 Cylinder 11 Misfire Detected  
P0312 Cylinder 12 Misfire Detected  
P0313 Misfire Detected with Low Fuel  
P0314 Single Cylinder Misfire (Cylinder not Specified)  
P0315 Crankshaft Position System Variation Not Learned  
P0316 Engine Misfire Detected on Startup (First 1000 Revolutions)  
P0317 Rough Road Hardware Not Present  
P0318 Rough Road Sensor "A" Signal Circuit  
P0319 Rough Road Sensor "B"  
P0320 Ignition/Distributor Engine Speed Input Circuit  
P0321 Ignition/Distributor Engine Speed Input Circuit Range/Performance  
P0322 Ignition/Distributor Engine Speed Input Circuit No Signal  
P0323 Ignition/Distributor Engine Speed Input Circuit Intermittent  
P0324 Knock Control System Error  
P0325 Knock Sensor 1 Circuit  
P0326 Knock Sensor 1 Circuit Range/Performance  
P0327 Knock Sensor 1 Circuit Low  
P0328 Knock Sensor 1 Circuit High  
P0329 Knock Sensor 1 Circuit Input Intermittent  
P0330 Knock Sensor 2 Circuit  
P0331 Knock Sensor 2 Circuit Range/Performance  
P0332 Knock Sensor 2 Circuit Low  
P0333 Knock Sensor 2 Circuit High  
P0334 Knock Sensor 2 Circuit Input Intermittent  
P0335 Crankshaft Position Sensor "A" Circuit  
P0336 Crankshaft Position Sensor "A" Circuit Range/Performance  
P0337 Crankshaft Position Sensor "A" Circuit Low  
P0338 Crankshaft Position Sensor "A" Circuit High  
P0339 Crankshaft Position Sensor "A" Circuit Intermittent  
P0340 Camshaft Position Sensor "A" Circuit  
P0341 Camshaft Position Sensor "A" Circuit Range/Performance  
P0342 Camshaft Position Sensor "A" Circuit Low  
P0343 Camshaft Position Sensor "A" Circuit High  
P0344 Camshaft Position Sensor "A" Circuit Intermittent  
P0345 Camshaft Position Sensor "A" Circuit  
P0346 Camshaft Position Sensor "A" Circuit Range/Performance  
P0347 Camshaft Position Sensor "A" Circuit Low

P0348 Camshaft Position Sensor "A" Circuit High  
P0349 Camshaft Position Sensor "A" Circuit Intermittent  
P0350 Ignition Coil Primary/Secondary Circuit  
P0351 Ignition Coil "A" Primary/Secondary Circuit  
P0352 Ignition Coil "B" Primary/Secondary Circuit  
P0353 Ignition Coil "C" Primary/Secondary Circuit  
P0354 Ignition Coil "D" Primary/Secondary Circuit  
P0355 Ignition Coil "E" Primary/Secondary Circuit  
P0356 Ignition Coil "F" Primary/Secondary Circuit  
P0357 Ignition Coil "G" Primary/Secondary Circuit  
P0358 Ignition Coil "H" Primary/Secondary Circuit  
P0359 Ignition Coil "I" Primary/Secondary Circuit  
P0360 Ignition Coil "J" Primary/Secondary Circuit  
P0361 Ignition Coil "K" Primary/Secondary Circuit  
P0362 Ignition Coil "L" Primary/Secondary Circuit  
P0363 Misfire Detected - Fueling Disabled  
P0364 Reserved  
P0365 Camshaft Position Sensor "B" Circuit  
P0366 Camshaft Position Sensor "B" Circuit Range/Performance  
P0367 Camshaft Position Sensor "B" Circuit Low  
P0368 Camshaft Position Sensor "B" Circuit High  
P0369 Camshaft Position Sensor "B" Circuit Intermittent  
P0370 Timing Reference High Resolution Signal "A"  
P0371 Timing Reference High Resolution Signal "A" Too Many Pulses  
P0372 Timing Reference High Resolution Signal "A" Too Few Pulses  
P0373 Timing Reference High Resolution Signal "A" Intermittent/Erratic Pulses  
P0374 Timing Reference High Resolution Signal "A" No Pulse  
P0375 Timing Reference High Resolution Signal "B"  
P0376 Timing Reference High Resolution Signal "B" Too Many Pulses  
P0377 Timing Reference High Resolution Signal "B" Too Few Pulses  
P0378 Timing Reference High Resolution Signal "B" Intermittent/Erratic Pulses  
P0379 Timing Reference High Resolution Signal "B" No Pulses  
P0380 Glow Plug/Heater Circuit "A"  
P0381 Glow Plug/Heater Indicator Circuit  
P0382 Glow Plug/Heater Circuit "B"  
P0383 Reserved by SAE J2012  
P0384 Reserved by SAE J2012  
P0385 Crankshaft Position Sensor "B" Circuit  
P0386 Crankshaft Position Sensor "B" Circuit Range/Performance  
P0387 Crankshaft Position Sensor "B" Circuit Low  
P0388 Crankshaft Position Sensor "B" Circuit High  
P0389 Crankshaft Position Sensor "B" Circuit Intermittent  
P0390 Camshaft Position Sensor "B" Circuit  
P0391 Camshaft Position Sensor "B" Circuit Range/Performance  
P0392 Camshaft Position Sensor "B" Circuit Low  
P0393 Camshaft Position Sensor "B" Circuit High  
P0394 Camshaft Position Sensor "B" Circuit Intermittent  
P0400 Exhaust Gas Recirculation Flow  
P0401 Exhaust Gas Recirculation Flow Insufficient Detected  
P0402 Exhaust Gas Recirculation Flow Excessive Detected  
P0403 Exhaust Gas Recirculation Control Circuit  
P0404 Exhaust Gas Recirculation Control Circuit Range/Performance  
P0405 Exhaust Gas Recirculation Sensor "A" Circuit Low  
P0406 Exhaust Gas Recirculation Sensor "A" Circuit High  
P0407 Exhaust Gas Recirculation Sensor "B" Circuit Low  
P0408 Exhaust Gas Recirculation Sensor "B" Circuit High  
P0409 Exhaust Gas Recirculation Sensor "A" Circuit  
P0410 Secondary Air Injection System  
P0411 Secondary Air Injection System Incorrect Flow Detected  
P0412 Secondary Air Injection System Switching Valve "A" Circuit  
P0413 Secondary Air Injection System Switching Valve "A" Circuit Open  
P0414 Secondary Air Injection System Switching Valve "A" Circuit Shorted  
P0415 Secondary Air Injection System Switching Valve "B" Circuit  
P0416 Secondary Air Injection System Switching Valve "B" Circuit Open  
P0417 Secondary Air Injection System Switching Valve "B" Circuit Shorted  
P0418 Secondary Air Injection System Control "A" Circuit  
P0419 Secondary Air Injection System Control "B" Circuit  
P0420 Catalyst System Efficiency Below Threshold  
P0421 Warm Up Catalyst Efficiency Below Threshold  
P0422 Main Catalyst Efficiency Below Threshold

P0423 Heated Catalyst Efficiency Below Threshold  
P0424 Heated Catalyst Temperature Below Threshold  
P0425 Catalyst Temperature Sensor  
P0426 Catalyst Temperature Sensor Range/Performance  
P0427 Catalyst Temperature Sensor Low  
P0428 Catalyst Temperature Sensor High  
P0429 Catalyst Heater Control Circuit  
P0430 Catalyst System Efficiency Below Threshold  
P0431 Warm Up Catalyst Efficiency Below Threshold  
P0432 Main Catalyst Efficiency Below Threshold  
P0433 Heated Catalyst Efficiency Below Threshold  
P0434 Heated Catalyst Temperature Below Threshold  
P0435 Catalyst Temperature Sensor  
P0436 Catalyst Temperature Sensor Range/Performance  
P0437 Catalyst Temperature Sensor Low  
P0438 Catalyst Temperature Sensor High  
P0439 Catalyst Heater Control Circuit  
P0440 Evaporative Emission System  
P0441 Evaporative Emission System Incorrect Purge Flow  
P0442 Evaporative Emission System Leak Detected (small leak)  
P0443 Evaporative Emission System Purge Control Valve Circuit  
P0444 Evaporative Emission System Purge Control Valve Circuit Open  
P0445 Evaporative Emission System Purge Control Valve Circuit Shorted  
P0446 Evaporative Emission System Vent Control Circuit  
P0447 Evaporative Emission System Vent Control Circuit Open  
P0448 Evaporative Emission System Vent Control Circuit Shorted  
P0449 Evaporative Emission System Vent Valve/Solenoid Circuit  
P0450 Evaporative Emission System Pressure Sensor/Switch  
P0451 Evaporative Emission System Pressure Sensor/Switch Range/Performance  
P0452 Evaporative Emission System Pressure Sensor/Switch Low  
P0453 Evaporative Emission System Pressure Sensor/Switch High  
P0454 Evaporative Emission System Pressure Sensor/Switch Intermittent  
P0455 Evaporative Emission System Leak Detected (large leak)  
P0456 Evaporative Emission System Leak Detected (very small leak)  
P0457 Evaporative Emission System Leak Detected (fuel cap loose/off)  
P0458 Evaporative Emission System Purge Control Valve Circuit Low  
P0459 Evaporative Emission System Purge Control Valve Circuit High  
P0460 Fuel Level Sensor "A" Circuit  
P0461 Fuel Level Sensor "A" Circuit Range/Performance  
P0462 Fuel Level Sensor "A" Circuit Low  
P0463 Fuel Level Sensor "A" Circuit High  
P0464 Fuel Level Sensor "A" Circuit Intermittent  
P0465 EVAP Purge Flow Sensor Circuit  
P0466 EVAP Purge Flow Sensor Circuit Range/Performance  
P0467 EVAP Purge Flow Sensor Circuit Low  
P0468 EVAP Purge Flow Sensor Circuit High  
P0469 EVAP Purge Flow Sensor Circuit Intermittent  
P0470 Exhaust Pressure Sensor  
P0471 Exhaust Pressure Sensor Range/Performance  
P0472 Exhaust Pressure Sensor Low  
P0473 Exhaust Pressure Sensor High  
P0474 Exhaust Pressure Sensor Intermittent  
P0475 Exhaust Pressure Control Valve  
P0476 Exhaust Pressure Control Valve Range/Performance  
P0477 Exhaust Pressure Control Valve Low  
P0478 Exhaust Pressure Control Valve High  
P0479 Exhaust Pressure Control Valve Intermittent  
P0480 Fan 1 Control Circuit  
P0481 Fan 2 Control Circuit  
P0482 Fan 3 Control Circuit  
P0483 Fan Rationality Check  
P0484 Fan Circuit Over Current  
P0485 Fan Power/Ground Circuit  
P0486 Exhaust Gas Recirculation Sensor "B" Circuit  
P0487 Exhaust Gas Recirculation Throttle Position Control Circuit  
P0488 Exhaust Gas Recirculation Throttle Position Control Range/Performance  
P0489 Exhaust Gas Recirculation Control Circuit Low  
P0490 Exhaust Gas Recirculation Control Circuit High  
P0491 Secondary Air Injection System Insufficient Flow  
P0492 Secondary Air Injection System Insufficient Flow



P0493 Fan Overspeed  
P0494 Fan Speed Low  
P0495 Fan Speed High  
P0496 Evaporative Emission System High Purge Flow  
P0497 Evaporative Emission System Low Purge Flow  
P0498 Evaporative Emission System Vent Valve Control Circuit Low  
P0499 Evaporative Emission System Vent Valve Control Circuit High  
P0500 Vehicle Speed Sensor "A"  
P0501 Vehicle Speed Sensor "A" Range/Performance  
P0502 Vehicle Speed Sensor "A" Circuit Low Input  
P0503 Vehicle Speed Sensor "A" Intermittent/Erratic/High  
P0504 Brake Switch "A"/"B" Correlation  
P0505 Idle Air Control System  
P0506 Idle Air Control System RPM Lower Than Expected  
P0507 Idle Air Control System RPM Higher Than Expected  
P0508 Idle Air Control System Circuit Low  
P0509 Idle Air Control System Circuit High  
P0510 Closed Throttle Position Switch  
P0511 Idle Air Control Circuit  
P0512 Starter Request Circuit  
P0513 Incorrect Immobilizer Key  
P0514 Battery Temperature Sensor Circuit Range/Performance  
P0515 Battery Temperature Sensor Circuit  
P0516 Battery Temperature Sensor Circuit Low  
P0517 Battery Temperature Sensor Circuit High  
P0518 Idle Air Control Circuit Intermittent  
P0519 Idle Air Control System Performance  
P0520 Engine Oil Pressure Sensor/Switch Circuit  
P0521 Engine Oil Pressure Sensor/Switch Range/Performance  
P0522 Engine Oil Pressure Sensor/Switch Low Voltage  
P0523 Engine Oil Pressure Sensor/Switch High Voltage  
P0524 Engine Oil Pressure Too Low  
P0525 Cruise Control Servo Control Circuit Range/Performance  
P0526 Fan Speed Sensor Circuit  
P0527 Fan Speed Sensor Circuit Range/Performance  
P0528 Fan Speed Sensor Circuit No Signal  
P0529 Fan Speed Sensor Circuit Intermittent  
P0530 A/C Refrigerant Pressure Sensor "A" Circuit  
P0531 A/C Refrigerant Pressure Sensor "A" Circuit Range/Performance  
P0532 A/C Refrigerant Pressure Sensor "A" Circuit Low  
P0533 A/C Refrigerant Pressure Sensor "A" Circuit High  
P0534 Air Conditioner Refrigerant Charge Loss  
P0535 A/C Evaporator Temperature Sensor Circuit  
P0536 A/C Evaporator Temperature Sensor Circuit Range/Performance  
P0537 A/C Evaporator Temperature Sensor Circuit Low  
P0538 A/C Evaporator Temperature Sensor Circuit High  
P0539 A/C Evaporator Temperature Sensor Circuit Intermittent  
P0540 Intake Air Heater "A" Circuit  
P0541 Intake Air Heater "A" Circuit Low  
P0542 Intake Air Heater "A" Circuit High  
P0543 Intake Air Heater "A" Circuit Open  
P0544 Exhaust Gas Temperature Sensor Circuit  
P0545 Exhaust Gas Temperature Sensor Circuit Low  
P0546 Exhaust Gas Temperature Sensor Circuit High  
P0547 Exhaust Gas Temperature Sensor Circuit  
P0548 Exhaust Gas Temperature Sensor Circuit Low  
P0549 Exhaust Gas Temperature Sensor Circuit High  
P0550 Power Steering Pressure Sensor/Switch Circuit  
P0551 Power Steering Pressure Sensor/Switch Circuit Range/Performance  
P0552 Power Steering Pressure Sensor/Switch Circuit Low Input  
P0553 Power Steering Pressure Sensor/Switch Circuit High Input  
P0554 Power Steering Pressure Sensor/Switch Circuit Intermittent  
P0555 Brake Booster Pressure Sensor Circuit  
P0556 Brake Booster Pressure Sensor Circuit Range/Performance  
P0557 Brake Booster Pressure Sensor Circuit Low Input  
P0558 Brake Booster Pressure Sensor Circuit High Input  
P0559 Brake Booster Pressure Sensor Circuit Intermittent  
P0560 System Voltage  
P0561 System Voltage Unstable  
P0562 System Voltage Low

P0563 System Voltage High  
P0564 Cruise Control Multi-Function Input "A" Circuit  
P0565 Cruise Control On Signal  
P0566 Cruise Control Off Signal  
P0567 Cruise Control Resume Signal  
P0568 Cruise Control Set Signal  
P0569 Cruise Control Coast Signal  
P0570 Cruise Control Accelerate Signal  
P0571 Brake Switch "A" Circuit  
P0572 Brake Switch "A" Circuit Low  
P0573 Brake Switch "A" Circuit High  
P0574 Cruise Control System - Vehicle Speed Too High  
P0575 Cruise Control Input Circuit  
P0576 Cruise Control Input Circuit Low  
P0577 Cruise Control Input Circuit High  
P0578 Cruise Control Multi-Function Input "A" Circuit Stuck  
P0579 Cruise Control Multi-Function Input "A" Circuit Range/Performance  
P0580 Cruise Control Multi-Function Input "A" Circuit Low  
P0581 Cruise Control Multi-Function Input "A" Circuit High  
P0582 Cruise Control Vacuum Control Circuit/Open  
P0583 Cruise Control Vacuum Control Circuit Low  
P0584 Cruise Control Vacuum Control Circuit High  
P0585 Cruise Control Multi-Function Input "A"/"B" Correlation  
P0586 Cruise Control Vent Control Circuit/Open  
P0587 Cruise Control Vent Control Circuit Low  
P0588 Cruise Control Vent Control Circuit High  
P0589 Cruise Control Multi-Function Input "B" Circuit  
P0590 Cruise Control Multi-Function Input "B" Circuit Stuck  
P0591 Cruise Control Multi-Function Input "B" Circuit Range/Performance  
P0592 Cruise Control Multi-Function Input "B" Circuit Low  
P0593 Cruise Control Multi-Function Input "B" Circuit High  
P0594 Cruise Control Servo Control Circuit/Open  
P0595 Cruise Control Servo Control Circuit Low  
P0596 Cruise Control Servo Control Circuit High  
P0597 Thermostat Heater Control Circuit/Open  
P0598 Thermostat Heater Control Circuit Low  
P0599 Thermostat Heater Control Circuit High  
P0600 Serial Communication Link  
P0601 Internal Control Module Memory Check Sum Error  
P0602 Control Module Programming Error  
P0603 Internal Control Module Keep Alive Memory (KAM) Error  
P0604 Internal Control Module Random Access Memory (RAM) Error  
P0605 Internal Control Module Read Only Memory (ROM) Error  
P0606 ECM/PCM Processor  
P0607 Control Module Performance  
P0608 Control Module VSS Output "A"  
P0609 Control Module VSS Output "B"  
P0610 Control Module Vehicle Options Error  
P0611 Fuel Injector Control Module Performance  
P0612 Fuel Injector Control Module Relay Control  
P0613 TCM Processor  
P0614 ECM / TCM Incompatible  
P0615 Starter Relay Circuit  
P0616 Starter Relay Circuit Low  
P0617 Starter Relay Circuit High  
P0618 Alternative Fuel Control Module KAM Error  
P0619 Alternative Fuel Control Module RAM/ROM Error  
P0620 Generator Control Circuit  
P0621 Generator Lamp/L Terminal Circuit  
P0622 Generator Field/F Terminal Circuit  
P0623 Generator Lamp Control Circuit  
P0624 Fuel Cap Lamp Control Circuit  
P0625 Generator Field/F Terminal Circuit Low  
P0626 Generator Field/F Terminal Circuit High  
P0627 Fuel Pump "A" Control Circuit /Open  
P0628 Fuel Pump "A" Control Circuit Low  
P0629 Fuel Pump "A" Control Circuit High  
P0630 VIN Not Programmed or Incompatible - ECM/PCM  
P0631 VIN Not Programmed or Incompatible - TCM  
P0632 Odometer Not Programmed - ECM/PCM

P0633 Immobilizer Key Not Programmed - ECM/PCM  
P0634 PCM/ECM/TCM Internal Temperature Too High  
P0635 Power Steering Control Circuit  
P0636 Power Steering Control Circuit Low  
P0637 Power Steering Control Circuit High  
P0638 Throttle Actuator Control Range/Performance  
P0639 Throttle Actuator Control Range/Performance  
P0640 Intake Air Heater Control Circuit  
P0641 Sensor Reference Voltage "A" Circuit/Open  
P0642 Sensor Reference Voltage "A" Circuit Low  
P0643 Sensor Reference Voltage "A" Circuit High  
P0644 Driver Display Serial Communication Circuit  
P0645 A/C Clutch Relay Control Circuit  
P0646 A/C Clutch Relay Control Circuit Low  
P0647 A/C Clutch Relay Control Circuit High  
P0648 Immobilizer Lamp Control Circuit  
P0649 Speed Control Lamp Control Circuit  
P0650 Malfunction Indicator Lamp (MIL) Control Circuit  
P0651 Sensor Reference Voltage "B" Circuit/Open  
P0652 Sensor Reference Voltage "B" Circuit Low  
P0653 Sensor Reference Voltage "B" Circuit High  
P0654 Engine RPM Output Circuit  
P0655 Engine Hot Lamp Output Control Circuit  
P0656 Fuel Level Output Circuit  
P0657 Actuator Supply Voltage "A" Circuit/Open  
P0658 Actuator Supply Voltage "A" Circuit Low  
P0659 Actuator Supply Voltage "A" Circuit High  
P0660 Intake Manifold Tuning Valve Control Circuit/Open  
P0661 Intake Manifold Tuning Valve Control Circuit Low  
P0662 Intake Manifold Tuning Valve Control Circuit High  
P0663 Intake Manifold Tuning Valve Control Circuit/Open  
P0664 Intake Manifold Tuning Valve Control Circuit Low  
P0665 Intake Manifold Tuning Valve Control Circuit High  
P0666 PCM/ECM/TCM Internal Temperature Sensor Circuit  
P0667 PCM/ECM/TCM Internal Temperature Sensor Range/Performance  
P0668 PCM/ECM/TCM Internal Temperature Sensor Circuit Low  
P0669 PCM/ECM/TCM Internal Temperature Sensor Circuit High  
P0670 Glow Plug Module Control Circuit  
P0671 Cylinder 1 Glow Plug Circuit  
P0672 Cylinder 2 Glow Plug Circuit  
P0673 Cylinder 3 Glow Plug Circuit  
P0674 Cylinder 4 Glow Plug Circuit  
P0675 Cylinder 5 Glow Plug Circuit  
P0676 Cylinder 6 Glow Plug Circuit  
P0677 Cylinder 7 Glow Plug Circuit  
P0678 Cylinder 8 Glow Plug Circuit  
P0679 Cylinder 9 Glow Plug Circuit  
P0680 Cylinder 10 Glow Plug Circuit  
P0681 Cylinder 11 Glow Plug Circuit  
P0682 Cylinder 12 Glow Plug Circuit  
P0683 Glow Plug Control Module to PCM Communication Circuit  
P0684 Glow Plug Control Module to PCM Communication Circuit Range/Performance  
P0685 ECM/PCM Power Relay Control Circuit /Open  
P0686 ECM/PCM Power Relay Control Circuit Low  
P0687 ECM/PCM Power Relay Control Circuit High  
P0688 ECM/PCM Power Relay Sense Circuit /Open  
P0689 ECM/PCM Power Relay Sense Circuit Low  
P0690 ECM/PCM Power Relay Sense Circuit High  
P0691 Fan 1 Control Circuit Low  
P0692 Fan 1 Control Circuit High  
P0693 Fan 2 Control Circuit Low  
P0694 Fan 2 Control Circuit High  
P0695 Fan 3 Control Circuit Low  
P0696 Fan 3 Control Circuit High  
P0697 Sensor Reference Voltage "C" Circuit/Open  
P0698 Sensor Reference Voltage "C" Circuit Low  
P0699 Sensor Reference Voltage "C" Circuit High  
P0700 Transmission Control System (MIL Request)  
P0701 Transmission Control System Range/Performance  
P0702 Transmission Control System Electrical

P0703 Brake Switch "B" Circuit  
P0704 Clutch Switch Input Circuit Malfunction  
P0705 Transmission Range Sensor Circuit Malfunction (PRNDL Input)  
P0706 Transmission Range Sensor Circuit Range/Performance  
P0707 Transmission Range Sensor Circuit Low  
P0708 Transmission Range Sensor Circuit High  
P0709 Transmission Range Sensor Circuit Intermittent  
P0710 Transmission Fluid Temperature Sensor "A" Circuit  
P0711 Transmission Fluid Temperature Sensor "A" Circuit Range/Performance  
P0712 Transmission Fluid Temperature Sensor "A" Circuit Low  
P0713 Transmission Fluid Temperature Sensor "A" Circuit High  
P0714 Transmission Fluid Temperature Sensor "A" Circuit Intermittent  
P0715 Input/Turbine Speed Sensor "A" Circuit  
P0716 Input/Turbine Speed Sensor "A" Circuit Range/Performance  
P0717 Input/Turbine Speed Sensor "A" Circuit No Signal  
P0718 Input/Turbine Speed Sensor "A" Circuit Intermittent  
P0719 Brake Switch "B" Circuit Low  
P0720 Output Speed Sensor Circuit  
P0721 Output Speed Sensor Circuit Range/Performance  
P0722 Output Speed Sensor Circuit No Signal  
P0723 Output Speed Sensor Circuit Intermittent  
P0724 Brake Switch "B" Circuit High  
P0725 Engine Speed Input Circuit  
P0726 Engine Speed Input Circuit Range/Performance  
P0727 Engine Speed Input Circuit No Signal  
P0728 Engine Speed Input Circuit Intermittent  
P0729 Gear 6 Incorrect Ratio  
P0730 Incorrect Gear Ratio  
P0731 Gear 1 Incorrect Ratio  
P0732 Gear 2 Incorrect Ratio  
P0733 Gear 3 Incorrect Ratio  
P0734 Gear 4 Incorrect Ratio  
P0735 Gear 5 Incorrect Ratio  
P0736 Reverse Incorrect Ratio  
P0737 TCM Engine Speed Output Circuit  
P0738 TCM Engine Speed Output Circuit Low  
P0739 TCM Engine Speed Output Circuit High  
P0740 Torque Converter Clutch Circuit/Open  
P0741 Torque Converter Clutch Circuit Performance or Stuck Off  
P0742 Torque Converter Clutch Circuit Stuck On  
P0743 Torque Converter Clutch Circuit Electrical  
P0744 Torque Converter Clutch Circuit Intermittent  
P0745 Pressure Control Solenoid "A"  
P0746 Pressure Control Solenoid "A" Performance or Stuck Off  
P0747 Pressure Control Solenoid "A" Stuck On  
P0748 Pressure Control Solenoid "A" Electrical  
P0749 Pressure Control Solenoid "A" Intermittent  
P0750 Shift Solenoid "A"  
P0751 Shift Solenoid "A" Performance or Stuck Off  
P0752 Shift Solenoid "A" Stuck On  
P0753 Shift Solenoid "A" Electrical  
P0754 Shift Solenoid "A" Intermittent  
P0755 Shift Solenoid "B"  
P0756 Shift Solenoid "B" Performance or Stuck Off  
P0757 Shift Solenoid "B" Stuck On  
P0758 Shift Solenoid "B" Electrical  
P0759 Shift Solenoid "B" Intermittent  
P0760 Shift Solenoid "C"  
P0761 Shift Solenoid "C" Performance or Stuck Off  
P0762 Shift Solenoid "C" Stuck On  
P0763 Shift Solenoid "C" Electrical  
P0764 Shift Solenoid "C" Intermittent  
P0765 Shift Solenoid "D"  
P0766 Shift Solenoid "D" Performance or Stuck Off  
P0767 Shift Solenoid "D" Stuck On  
P0768 Shift Solenoid "D" Electrical  
P0769 Shift Solenoid "D" Intermittent  
P0770 Shift Solenoid "E"  
P0771 Shift Solenoid "E" Performance or Stuck Off  
P0772 Shift Solenoid "E" Stuck On

P0773 Shift Solenoid "E" Electrical  
P0774 Shift Solenoid "E" Intermittent  
P0775 Pressure Control Solenoid "B"  
P0776 Pressure Control Solenoid "B" Performance or Stuck off  
P0777 Pressure Control Solenoid "B" Stuck On  
P0778 Pressure Control Solenoid "B" Electrical  
P0779 Pressure Control Solenoid "B" Intermittent  
P0780 Shift Error  
P0781 1-2 Shift  
P0782 2-3 Shift  
P0783 3-4 Shift  
P0784 4-5 Shift  
P0785 Shift/Timing Solenoid  
P0786 Shift/Timing Solenoid Range/Performance  
P0787 Shift/Timing Solenoid Low  
P0788 Shift/Timing Solenoid High  
P0789 Shift/Timing Solenoid Intermittent  
P0790 Normal/Performance Switch Circuit  
P0791 Intermediate Shaft Speed Sensor "A" Circuit  
P0792 Intermediate Shaft Speed Sensor "A" Circuit Range/Performance  
P0793 Intermediate Shaft Speed Sensor "A" Circuit No Signal  
P0794 Intermediate Shaft Speed Sensor "A" Circuit Intermittent  
P0795 Pressure Control Solenoid "C"  
P0796 Pressure Control Solenoid "C" Performance or Stuck off  
P0797 Pressure Control Solenoid "C" Stuck On  
P0798 Pressure Control Solenoid "C" Electrical  
P0799 Pressure Control Solenoid "C" Intermittent  
P0800 Transfer Case Control System (MIL Request)  
P0801 Reverse Inhibit Control Circuit  
P0802 Transmission Control System MIL Request Circuit/Open  
P0803 1-4 Upshift (Skip Shift) Solenoid Control Circuit  
P0804 1-4 Upshift (Skip Shift) Lamp Control Circuit  
P0805 Clutch Position Sensor Circuit  
P0806 Clutch Position Sensor Circuit Range/Performance  
P0807 Clutch Position Sensor Circuit Low  
P0808 Clutch Position Sensor Circuit High  
P0809 Clutch Position Sensor Circuit Intermittent  
P0810 Clutch Position Control Error  
P0811 Excessive Clutch Slippage  
P0812 Reverse Input Circuit  
P0813 Reverse Output Circuit  
P0814 Transmission Range Display Circuit  
P0815 Upshift Switch Circuit  
P0816 Downshift Switch Circuit  
P0817 Starter Disable Circuit  
P0818 Driveline Disconnect Switch Input Circuit  
P0819 Up and Down Shift Switch to Transmission Range Correlation  
P0820 Gear Lever X-Y Position Sensor Circuit  
P0821 Gear Lever X Position Circuit  
P0822 Gear Lever Y Position Circuit  
P0823 Gear Lever X Position Circuit Intermittent  
P0824 Gear Lever Y Position Circuit Intermittent  
P0825 Gear Lever Push-Pull Switch (Shift Anticipate)  
P0826 Up and Down Shift Switch Circuit  
P0827 Up and Down Shift Switch Circuit Low  
P0828 Up and Down Shift Switch Circuit High  
P0829 5-6 Shift  
P0830 Clutch Pedal Switch "A" Circuit  
P0831 Clutch Pedal Switch "A" Circuit Low  
P0832 Clutch Pedal Switch "A" Circuit High  
P0833 Clutch Pedal Switch "B" Circuit  
P0834 Clutch Pedal Switch "B" Circuit Low  
P0835 Clutch Pedal Switch "B" Circuit High  
P0836 Four Wheel Drive (4WD) Switch Circuit  
P0837 Four Wheel Drive (4WD) Switch Circuit Range/Performance  
P0838 Four Wheel Drive (4WD) Switch Circuit Low  
P0839 Four Wheel Drive (4WD) Switch Circuit High  
P0840 Transmission Fluid Pressure Sensor/Switch "A" Circuit  
P0841 Transmission Fluid Pressure Sensor/Switch "A" Circuit Range/Performance  
P0842 Transmission Fluid Pressure Sensor/Switch "A" Circuit Low

P0843 Transmission Fluid Pressure Sensor/Switch "A" Circuit High  
P0844 Transmission Fluid Pressure Sensor/Switch "A" Circuit Intermittent  
P0845 Transmission Fluid Pressure Sensor/Switch "B" Circuit  
P0846 Transmission Fluid Pressure Sensor/Switch "B" Circuit Range/Performance  
P0847 Transmission Fluid Pressure Sensor/Switch "B" Circuit Low  
P0848 Transmission Fluid Pressure Sensor/Switch "B" Circuit High  
P0849 Transmission Fluid Pressure Sensor/Switch "B" Circuit Intermittent  
P0850 Park/Neutral Switch Input Circuit  
P0851 Park/Neutral Switch Input Circuit Low  
P0852 Park/Neutral Switch Input Circuit High  
P0853 Drive Switch Input Circuit  
P0854 Drive Switch Input Circuit Low  
P0855 Drive Switch Input Circuit High  
P0856 Traction Control Input Signal  
P0857 Traction Control Input Signal Range/Performance  
P0858 Traction Control Input Signal Low  
P0859 Traction Control Input Signal High  
P0860 Gear Shift Module Communication Circuit  
P0861 Gear Shift Module Communication Circuit Low  
P0862 Gear Shift Module Communication Circuit High  
P0863 TCM Communication Circuit  
P0864 TCM Communication Circuit Range/Performance  
P0865 TCM Communication Circuit Low  
P0866 TCM Communication Circuit High  
P0867 Transmission Fluid Pressure  
P0868 Transmission Fluid Pressure Low  
P0869 Transmission Fluid Pressure High  
P0870 Transmission Fluid Pressure Sensor/Switch "C" Circuit  
P0871 Transmission Fluid Pressure Sensor/Switch "C" Circuit Range/Performance  
P0872 Transmission Fluid Pressure Sensor/Switch "C" Circuit Low  
P0873 Transmission Fluid Pressure Sensor/Switch "C" Circuit High  
P0874 Transmission Fluid Pressure Sensor/Switch "C" Circuit Intermittent  
P0875 Transmission Fluid Pressure Sensor/Switch "D" Circuit  
P0876 Transmission Fluid Pressure Sensor/Switch "D" Circuit Range/Performance  
P0877 Transmission Fluid Pressure Sensor/Switch "D" Circuit Low  
P0878 Transmission Fluid Pressure Sensor/Switch "D" Circuit High  
P0879 Transmission Fluid Pressure Sensor/Switch "D" Circuit Intermittent  
P0880 TCM Power Input Signal  
P0881 TCM Power Input Signal Range/Performance  
P0882 TCM Power Input Signal Low  
P0883 TCM Power Input Signal High  
P0884 TCM Power Input Signal Intermittent  
P0885 TCM Power Relay Control Circuit/Open  
P0886 TCM Power Relay Control Circuit Low  
P0887 TCM Power Relay Control Circuit High  
P0888 TCM Power Relay Sense Circuit  
P0889 TCM Power Relay Sense Circuit Range/Performance  
P0890 TCM Power Relay Sense Circuit Low  
P0891 TCM Power Relay Sense Circuit High  
P0892 TCM Power Relay Sense Circuit Intermittent  
P0893 Multiple Gears Engaged  
P0894 Transmission Component Slipping  
P0895 Shift Time Too Short  
P0896 Shift Time Too Long  
P0897 Transmission Fluid Deteriorated  
P0898 Transmission Control System MIL Request Circuit Low  
P0899 Transmission Control System MIL Request Circuit High  
P0900 Clutch Actuator Circuit/Open  
P0901 Clutch Actuator Circuit Range/Performance  
P0902 Clutch Actuator Circuit Low  
P0903 Clutch Actuator Circuit High  
P0904 Gate Select Position Circuit  
P0905 Gate Select Position Circuit Range/Performance  
P0906 Gate Select Position Circuit Low  
P0907 Gate Select Position Circuit High  
P0908 Gate Select Position Circuit Intermittent  
P0909 Gate Select Control Error  
P0910 Gate Select Actuator Circuit/Open  
P0911 Gate Select Actuator Circuit Range/Performance  
P0912 Gate Select Actuator Circuit Low

P0913 Gate Select Actuator Circuit High  
P0914 Gear Shift Position Circuit  
P0915 Gear Shift Position Circuit Range/Performance  
P0916 Gear Shift Position Circuit Low  
P0917 Gear Shift Position Circuit High  
P0918 Gear Shift Position Circuit Intermittent  
P0919 Gear Shift Position Control Error  
P0920 Gear Shift Forward Actuator Circuit/Open  
P0921 Gear Shift Forward Actuator Circuit Range/Performance  
P0922 Gear Shift Forward Actuator Circuit Low  
P0923 Gear Shift Forward Actuator Circuit High  
P0924 Gear Shift Reverse Actuator Circuit/Open  
P0925 Gear Shift Reverse Actuator Circuit Range/Performance  
P0926 Gear Shift Reverse Actuator Circuit Low  
P0927 Gear Shift Reverse Actuator Circuit High  
P0928 Gear Shift Lock Solenoid Control Circuit/Open  
P0929 Gear Shift Lock Solenoid Control Circuit Range/Performance  
P0930 Gear Shift Lock Solenoid Control Circuit Low  
P0931 Gear Shift Lock Solenoid Control Circuit High  
P0932 Hydraulic Pressure Sensor Circuit  
P0933 Hydraulic Pressure Sensor Range/Performance  
P0934 Hydraulic Pressure Sensor Circuit Low  
P0935 Hydraulic Pressure Sensor Circuit High  
P0936 Hydraulic Pressure Sensor Circuit Intermittent  
P0937 Hydraulic Oil Temperature Sensor Circuit  
P0938 Hydraulic Oil Temperature Sensor Range/Performance  
P0939 Hydraulic Oil Temperature Sensor Circuit Low  
P0940 Hydraulic Oil Temperature Sensor Circuit High  
P0941 Hydraulic Oil Temperature Sensor Circuit Intermittent  
P0942 Hydraulic Pressure Unit  
P0943 Hydraulic Pressure Unit Cycling Period Too Short  
P0944 Hydraulic Pressure Unit Loss of Pressure  
P0945 Hydraulic Pump Relay Circuit/Open  
P0946 Hydraulic Pump Relay Circuit Range/Performance  
P0947 Hydraulic Pump Relay Circuit Low  
P0948 Hydraulic Pump Relay Circuit High  
P0949 Auto Shift Manual Adaptive Learning Not Complete  
P0950 Auto Shift Manual Control Circuit  
P0951 Auto Shift Manual Control Circuit Range/Performance  
P0952 Auto Shift Manual Control Circuit Low  
P0953 Auto Shift Manual Control Circuit High  
P0954 Auto Shift Manual Control Circuit Intermittent  
P0955 Auto Shift Manual Mode Circuit  
P0956 Auto Shift Manual Mode Circuit Range/Performance  
P0957 Auto Shift Manual Mode Circuit Low  
P0958 Auto Shift Manual Mode Circuit High  
P0959 Auto Shift Manual Mode Circuit Intermittent  
P0960 Pressure Control Solenoid "A" Control Circuit/Open  
P0961 Pressure Control Solenoid "A" Control Circuit Range/Performance  
P0962 Pressure Control Solenoid "A" Control Circuit Low  
P0963 Pressure Control Solenoid "A" Control Circuit High  
P0964 Pressure Control Solenoid "B" Control Circuit/Open  
P0965 Pressure Control Solenoid "B" Control Circuit Range/Performance  
P0966 Pressure Control Solenoid "B" Control Circuit Low  
P0967 Pressure Control Solenoid "B" Control Circuit High  
P0968 Pressure Control Solenoid "C" Control Circuit/Open  
P0969 Pressure Control Solenoid "C" Control Circuit Range/Performance  
P0970 Pressure Control Solenoid "C" Control Circuit Low  
P0971 Pressure Control Solenoid "C" Control Circuit High  
P0972 Shift Solenoid "A" Control Circuit Range/Performance  
P0973 Shift Solenoid "A" Control Circuit Low  
P0974 Shift Solenoid "A" Control Circuit High  
P0975 Shift Solenoid "B" Control Circuit Range/Performance  
P0976 Shift Solenoid "B" Control Circuit Low  
P0977 Shift Solenoid "B" Control Circuit High  
P0978 Shift Solenoid "C" Control Circuit Range/Performance  
P0979 Shift Solenoid "C" Control Circuit Low  
P0980 Shift Solenoid "C" Control Circuit High  
P0981 Shift Solenoid "D" Control Circuit Range/Performance  
P0982 Shift Solenoid "D" Control Circuit Low

P0983 Shift Solenoid "D" Control Circuit High  
P0984 Shift Solenoid "E" Control Circuit Range/Performance  
P0985 Shift Solenoid "E" Control Circuit Low  
P0986 Shift Solenoid "E" Control Circuit High  
P0987 Transmission Fluid Pressure Sensor/Switch "E" Circuit  
P0988 Transmission Fluid Pressure Sensor/Switch "E" Circuit Range/Performance  
P0989 Transmission Fluid Pressure Sensor/Switch "E" Circuit Low  
P0990 Transmission Fluid Pressure Sensor/Switch "E" Circuit High  
P0991 Transmission Fluid Pressure Sensor/Switch "E" Circuit Intermittent  
P0992 Transmission Fluid Pressure Sensor/Switch "F" Circuit  
P0993 Transmission Fluid Pressure Sensor/Switch "F" Circuit Range/Performance  
P0994 Transmission Fluid Pressure Sensor/Switch "F" Circuit Low  
P0995 Transmission Fluid Pressure Sensor/Switch "F" Circuit High  
P0996 Transmission Fluid Pressure Sensor/Switch "F" Circuit Intermittent  
P0997 Shift Solenoid "F" Control Circuit Range/Performance  
P0998 Shift Solenoid "F" Control Circuit Low  
P0999 Shift Solenoid "F" Control Circuit High  
P0A00 Motor Electronics Coolant Temperature Sensor Circuit  
P0A01 Motor Electronics Coolant Temperature Sensor Circuit Range/Performance  
P0A02 Motor Electronics Coolant Temperature Sensor Circuit Low  
P0A03 Motor Electronics Coolant Temperature Sensor Circuit High  
P0A04 Motor Electronics Coolant Temperature Sensor Circuit Intermittent  
P0A05 Motor Electronics Coolant Pump Control Circuit/Open  
P0A06 Motor Electronics Coolant Pump Control Circuit Low  
P0A07 Motor Electronics Coolant Pump Control Circuit High  
P0A08 DC/DC Converter Status Circuit  
P0A09 DC/DC Converter Status Circuit Low Input  
P0A10 DC/DC Converter Status Circuit High Input  
P0A11 DC/DC Converter Enable Circuit/Open  
P0A12 DC/DC Converter Enable Circuit Low  
P0A13 DC/DC Converter Enable Circuit High  
P0A14 Engine Mount Control Circuit/Open  
P0A15 Engine Mount Control Circuit Low  
P0A16 Engine Mount Control Circuit High  
P0A17 Motor Torque Sensor Circuit  
P0A18 Motor Torque Sensor Circuit Range/Performance  
P0A19 Motor Torque Sensor Circuit Low  
P0A20 Motor Torque Sensor Circuit High  
P0A21 Motor Torque Sensor Circuit Intermittent  
P0A22 Generator Torque Sensor Circuit  
P0A23 Generator Torque Sensor Circuit Range/Performance  
P0A24 Generator Torque Sensor Circuit Low  
P0A25 Generator Torque Sensor Circuit High  
P0A26 Generator Torque Sensor Circuit Intermittent  
P0A27 Battery Power Off Circuit  
P0A28 Battery Power Off Circuit Low  
P0A29 Battery Power Off Circuit High  
P1083 Fuel Control Mixture Lean (Bank 1 Sensor 1)  
P1084 Fuel Control Mixture Rich (Bank 1 Sensor 1)  
P1085 Fuel Control Mixture Lean (Bank 2 Sensor 1)  
P1086 Fuel Control Mixture Rich (Bank 2 Sensor 1)  
P1087 O2 Sensor Circuit Slow Response in Lean Control Range (Bank 1 Sensor 1)  
P1088 O2 Sensor Circuit Slow Response in Rich Control Range (Bank 1 Sensor 1)  
P1089 O2 Sensor Circuit Slow Response in Lean Control Range (Bank 1 Sensor 2)  
P1090 Pre-Catalyst Fuel Trim Too Lean Bank 1  
P1091 Pre-Catalyst Fuel Trim Too Rich Bank 1  
P1092 Pre-Catalyst Fuel Trim Too Lean Bank 2  
P1093 Pre-Catalyst Fuel Trim Too Rich Bank 2  
P1094 O2 Sensor Circuit Slow Response in Rich Control Range (Bank 2 Sensor 1)  
P1095 O2 Sensor Circuit Slow Switching From Lean to Rich (Bank 1 Sensor 1)  
P1096 O2 Sensor Circuit Slow Switching From Lean to Rich (Bank 2 Sensor 1)  
P1097 O2 Sensor Circuit Slow Response after Coast Down Fuel Cutoff (Bank 1 Sensor 1)  
P1098 O2 Sensor Circuit Slow Response after Coast Down Fuel Cutoff (Bank 2 Sensor 2)  
P1111 Engine Coolant Temperature Radiator Outlet Sensor Low Input  
P1112 Engine Coolant Temperature Radiator Outlet Sensor High Input  
P1115 Coolant Temperature Sensor Plausibility  
P1116 Mass Or Volume Air Flow Circuit Range/Performance Problem (Bank 2)  
P1117 Mass Or Volume Air Flow Circuit Low Input (Bank 2)  
P1118 Mass Or Volume Air Flow Circuit High Input (Bank 2)  
P1120 Pedal Position Sensor Circuit



P1121 Pedal Position 1 Range/Performance Problem  
 P1122 Pedal Position 1 Low Input  
 P1123 Pedal Position 1 High Input  
 P1132 O2 Sensor Heater Control Circuit (Bank 1 Sensor 1)  
 P1133 O2 Sensor Heater Control Circuit (Bank 2 Sensor 1)  
 P1134 O2 Sensor Heater Circuit Signal Intermittent (Bank 1 Sensor 2)  
 P1135 O2 Sensor Heater Circuit Low Voltage (Bank 1 Sensor 1)  
 P1136 O2 Sensor Heater Circuit High Voltage (Bank 1 Sensor 1)  
 P1137 O2 Sensor Heater Circuit Signal Intermittant (Bank 1 Sensor 2)  
 P1138 O2 Sensor Heater Circuit Low Voltage (Bank 1 Sensor 2)  
 P1139 O2 Sensor Heater Circuit High Voltage (Bank 1 Sensor 2)  
 P1140 Mass or Volume Air Flow Circuit Range/Performance Problem  
 P1145 Solenoid Valve Running Losses Control Circuit Electrical  
 P1151 O2 Sensor Heater Circuit Signal Intermittant (Bank 2 Sensor 1)  
 P1152 O2 Sensor Heater Circuit Low Voltage (Bank 2 Sensor 1)  
 P1153 O2 Sensor Heater Circuit High Voltage (Bank 2 Sensor 1)  
 P1155 O2 Sensor Heater Circuit Intermittant (Bank 2 Sensor 2)  
 P1156 O2 Sensor Heater Circuit Low Voltage (Bank 2 Sensor 2)  
 P1157 O2 Sensor Heater Circuit High Voltage (Bank 2 Sensor 2)  
 P1158 Fuel Trim Additive Bank 1 Low  
 P1159 Fuel Trim Additive Bank 1 High  
 P1160 Fuel Trim Additive Bank 2 Low  
 P1161 Fuel Trim Additive Bank 2 High  
 P1162 Fuel Trim Additive Per Ignition Bank 1 Low  
 P1163 Fuel Trim Additive Per Ignition Bank 1 High  
 P1164 Fuel Trim Additive Per Ignition Bank 2 Low  
 P1165 Fuel Trim Additive Per Ignition Bank 2 High  
 P1174 Fuel Trim Adaptation Additive Bank 1 Malfunction  
 P1175 Fuel Trim Adaptation Additive Bank 2 Malfunction  
 P1176 O2 Sensor Slow Response Bank 1  
 P1177 O2 Sensor Slow Response Bank 2  
 P1178 O2 Sensor Signal Circuit Slow Switching From Rich to Lean (Bank 1 Sensor 1)  
 P1179 O2 Sensor Signal Circuit Slow Switching From Rich to Lean (Bank 2 Sensor 1)  
 P1180 O2 Sensor Signal Circuit Slow Switching From Rich to Lean (Bank 1 Sensor 2)  
 P1181 O2 Sensor Signal Circuit Slow Switching From Rich to Lean (Bank 2 Sensor 2)  
 P1182 O2 Sensor (Bank 1 Sensor 2) Open Circuit During Coast Down Fuel Cut-off  
 P1183 O2 Sensor (Bank 2 Sensor 2) Open Circuit During Coast Down Fuel Cut-off  
 P1186 O2 Sensor Heater Control Circuit (Bank 1 Sensor 2)  
 P1187 O2 Sensor Heater Control Circuit (Bank 2 Sensor 2)  
 P1188 Fuel Control (Bank 1 Sensor 1)  
 P1189 Fuel Control (Bank 2 Sensor 1)  
 P1190 Pre-catalyst Fuel Trim System Bank 1  
 P1191 Pre-catalyst Fuel Trim System Bank 2  
 P1192 Post-catalyst Fuel Trim System Bank 1  
 P1193 Post-catalyst Fuel Trim System Bank 2  
 P1221 Pedal Position Sensor 2 Range/Performance Problem  
 P1222 Pedal Position Sensor 2 Low Input  
 P1223 Pedal Position Sensor 2 High Input  
 P1270 Control Module Self-Test, Torque Monitoring  
 P1271 Ambient Air Pressure Sensor Electrical  
 P1283 Switching Solenoid for Air Assisted Injection Valves Bank 1 Control Circuit Electrical  
 P1284 Switching Solenoid for Air Assisted Injection Valves Bank 1 Control Circuit Signal Low  
 P1285 Switching Solenoid for Air Assisted Injection Valves Bank 1 Control Circuit Signal High  
 P1287 Switching Solenoid for Air Assisted Injection Valves Bank 2 Control Circuit Electrical  
 P1288 Switching Solenoid for Air Assisted Injection Valves Bank 2 Control Circuit Signal Low  
 P1289 Switching Solenoid for Air Assisted Injection Valves Bank 2 Control Circuit Signal High  
 P1313 "A" Camshaft Position Plausibility  
 P1317 "B" Camshaft Position Plausibility  
 P1327 Knock Sensor 2 (Bank 1) Low Input  
 P1328 Knock Sensor 2 (Bank 1) High Input  
 P1332 Knock Sensor 4 Low Input  
 P1333 Knock Sensor 4 High Input  
 P1340 Multiple Cylinder Misfire During Start  
 P1341 Multiple Cylinder Misfire With Fuel Cut-off  
 P1342 Misfire During Start Cylinder 1  
 P1343 Misfire Cylinder 1 With Fuel Cut-off  
 P1344 Misfire During Start Cylinder 2  
 P1345 Misfire Cylinder 2 With Fuel Cut-off  
 P1346 Misfire During Start Cylinder 3  
 P1347 Misfire Cylinder 3 With Fuel Cut-off

P1348 Misfire During Start Cylinder 4  
P1349 Misfire Cylinder 4 With Fuel Cut-off  
P1350 Misfire During Start Cylinder 5  
P1351 Misfire Cylinder 5 With Fuel Cut-off  
P1352 Misfire During Start Cylinder 6  
P1353 Misfire Cylinder 6 With Fuel Cut-off  
P1354 Misfire During Start Cylinder 7  
P1355 Misfire Cylinder 7 With Fuel Cut-off  
P1356 Misfire During Start Cylinder 8  
P1357 Misfire Cylinder 8 With Fuel Cut-off  
P1358 Misfire During Start Cylinder 9  
P1359 Misfire Cylinder 9 With Fuel Cut-off  
P1360 Misfire During Start Cylinder 10  
P1361 Misfire Cylinder 10 With Fuel Cut-off  
P1362 Misfire During Start Cylinder 11  
P1363 Misfire Cylinder 11 With Fuel Cut-off  
P1364 Misfire During Start Cylinder 12  
P1365 Misfire Cylinder 12 With Fuel Cut-off  
P1384 Knock Sensor 3 Circuit  
P1385 Knock Sensor 4 Circuit  
P1386 Control Module Self-test, Knock Control Baseline Test Bank 1  
P1396 Crankshaft Position Sensor Segment Timing Plausibility  
P1397 Camshaft Position Sensor "B" Circuit (Bank 1)  
P1400 Heated Catalyst Battery Voltage or Current too Low During Heating (Bank 1)  
P1401 Heated Catalyst Current too High During Heating (Bank 1)  
P1402 Heated Catalyst Power Switch Overtemperature Condition (Bank 1)  
P1403 Carbon Canister Shut Off valve Control Circuit Electrical  
P1404 Heated Catalyst Current too High During Heating (Bank 2)  
P1405 Heated Catalyst Power Switch Overtemperature Condition (Bank 2)  
P1406 Heated Catalyst Internal Control Module Checksum/ROM Error  
P1413 Secondary Air Injection Pump Relay Control Circuit Signal Low  
P1414 Secondary Air Injection System Monitor Circuit High  
P1420 Secondary Air Valve Control Circuit Electrical  
P1421 Secondary Air System Bank 1  
P1422 Secondary Air System Bank 2  
P1432 Secondary Air Injection System Incorrect Flow Detected  
P1438 Purge Control Valve Control Open Circuit  
P1439 Purge Control Valve Control Circuit Signal Low  
P1440 Purge Control Valve Control Circuit Signal High  
P1441 Leakage Diagnostic Pump Control Open Circuit  
P1442 Leakage Diagnostic Pump Control Circuit Signal Low  
P1443 Leakage Diagnostic Pump Control Circuit Signal High  
P1444 Diagnostic Module Tank Leakage (DM-TL) Pump Control Open Circuit  
P1445 Diagnostic Module Tank Leakage (DM-TL) Pump Control Circuit Signal Low  
P1446 Diagnostic Module Tank Leakage (DM-TL) Pump Control Circuit Signal High  
P1447 Diagnostic Module Tank Leakage (DM-TL) Pump Too High During Switching  
P1448 Diagnostic Module Tank Leakage (DM-TL) Pump Too Low During Switching  
P1449 Diagnostic Module Tank Leakage (DM-TL) Pump Too High  
P1450 Diagnostic Module Tank Leakage (DM-TL) Switching Solenoid Open Circuit  
P1451 Diagnostic Module Tank Leakage (DM-TL) Switching Solenoid Control Circuit Signal Low  
P1452 Diagnostic Module Tank Leakage (DM-TL) Switching Solenoid Control Circuit Signal High  
P1453 Secondary Air Injection Pump Relay Control Circuit Electrical  
P1454 Secondary Air Injection Pump With Series Resistor Control Circuit Electrical  
P1456 Heated Catalyst Heater Power Supply Open Circuit (Bank 1)  
P1457 Heated Catalyst Heater Power Switch Temperature Sensor Electrical (Bank 1)  
P1459 Heated Catalyst Heater Power Supply Open Circuit (Bank 2)  
P1460 Heated Catalyst Heater Power Switch Temperature Sensor Electrical (Bank 2)  
P1461 Heated Catalyst Gate Voltage Signal Low  
P1462 Heated Catalyst Internal Control Module Checksum/ROM Error  
P1463 Heated Catalyst Battery Temperature Sensor 1 Electrical  
P1464 Heated Catalyst Battery Temperature Sensor 2 Electrical  
P1465 Heated Catalyst Battery Temperature Sensor 1 or 2 Plausibility  
P1466 Heated Catalyst Power Switch Temperature Sensor Plausibility  
P1467 Heated Catalyst Comparison Battery Voltages of Power Switches Plausibility  
P1468 Heated Catalyst Battery Disconnecting Switch Plausibility  
P1470 Leakage Diagnostic Pump Control Circuit Electrical  
P1472 Diagnostic Module Tank leakage (DM-TL) Switching Solenoid Control Circuit Electrical  
P1473 Diagnostic Module Tank leakage (DM-TL) Pump Current Plausibility  
P1475 Leakage Diagnostic Pump Reed Switch Did Not Close  
P1476 Leakage Diagnostic Pump Clamped Tube

P1477 Leakage Diagnostic Pump Reed Switch Did Not Open  
P1500 Idle Speed Control Valve Stuck Open  
P1501 Idle Speed Control Valve Stuck Closed  
P1502 Idle Speed Control Valve Closing Solenoid Control Circuit Signal High or Low  
P1503 Idle Speed Control Valve Closing Solenoid Control Circuit Signal Low  
P1504 Idle Speed Control Valve Closing Solenoid Control Open Circuit  
P1505 Idle Speed Control Valve Closing Solenoid Control Circuit Electrical  
P1506 Idle Speed Control Valve Open Solenoid Control Circuit Signal High  
P1507 Idle Speed Control Valve Open Solenoid Control Circuit Signal Low  
P1508 Idle Speed Control Valve Opening Solenoid Control Open Circuit  
P1509 Idle Speed Control Valve Opening Solenoid Control Circuit Electrical  
P1510 Idle Speed Control Valve Stuck  
P1511 DISA Control Circuit Electrical  
P1512 DISA Control Circuit Signal Low  
P1513 DISA Control Circuit Signal High  
P1519 "A" Camshaft Position Actuator Bank 1  
P1520 "B" Camshaft Position Actuator Bank 1  
P1522 "A" Camshaft Position Actuator Bank 2  
P1523 "A" Camshaft Position Actuator Signal Low Bank 1  
P1524 "A" Camshaft Position Actuator Signal High Bank 1  
P1525 "A" Camshaft Position Actuator Control Open Circuit Bank 1  
P1526 "A" Camshaft Position Actuator Control Open Circuit Bank 2  
P1527 "A" Camshaft Position Actuator Control Circuit Signal Low Bank 1  
P1528 "A" Camshaft Position Actuator Control Circuit Signal High Bank 1  
P1529 "B" Camshaft Position Actuator Control Circuit Signal Low Bank 1  
P1530 "B" Camshaft Position Actuator Control Circuit Signal High Bank 1  
P1531 "B" Camshaft Position Actuator Control Open Circuit Bank 1  
P1532 "B" Camshaft Position Actuator Control Open Circuit Bank 2  
P1533 "B" Camshaft Position Actuator Control Circuit Signal Low Bank 2  
P1534 "B" Camshaft Position Actuator Control Circuit Signal High Bank 2  
P1540 Pedal Position Sensor  
P1541 Pedal Position Sensor Double Error  
P1542 Pedal Position Sensor Electrical  
P1546 Pedal Position Sensor  
P1550 Idle Speed Control valve Closing Solenoid Control Circuit Electrical  
P1556 "A" Camshaft Position Actuator Control Open Circuit Bank 1  
P1560 "B" Camshaft Position Actuator Control Open Circuit Bank 1  
P1564 Control Module Selection  
P1565 "B" Camshaft Position Actuator Control Open Circuit Bank 1  
P1569 "A" Camshaft Position Actuator Control Open Circuit Bank 2  
P1580 Throttle Valve Mechanically Stuck  
P1581 "B" Camshaft Position Actuator Control Open Circuit Bank 2  
P1589 Control Module Self Test, Knock Control Test Pulse Bank 1  
P1593 DISA Control Circuit Electrical  
P1594 "B" Camshaft Position Actuator Control Open Circuit Bank 2  
P1602 Control Module Self Test, Control Module Defective  
P1603 Control Module Self Test, Torque Monitoring  
P1604 Control Module Self Test, Speed Monitoring  
P1607 CAN Version  
P1608 Serial Communicating Link Control Module  
P1609 Serial Communicating Link EML  
P1611 Serial Communicating Link Transmission Control Module  
P1619 MAP Cooling Control Circuit Signal Low  
P1620 MAP Cooling Control Circuit Signal High  
P1622 MAP Cooling Control Circuit Electrical  
P1623 Pedal Position Sensor Potentiometer Supply  
P1624 Pedal Position Sensor Potentiometer Supply Channel 1 Electrical  
P1625 Pedal Position Sensor Potentiometer Supply Channel 2 Electrical  
P1632 Throttle Valve Adaptation; Adaptation Condition Not Met  
P1633 Throttle Valve Adaptation; Limp Home Position  
P1634 Throttle Valve Adaptation; Spring Test Failed  
P1635 Throttle Valve Adaptation; Lower Mechanical Stop Not Adapted  
P1636 Throttle Valve Control Circuit  
P1637 Throttle Valve Position Control; Control Deviation  
P1638 Throttle Valve Position Control; Throttle Stuck Temporarily  
P1639 Throttle Valve Position Control; Throttle Stuck Permanently  
P1640 Internal Control Module (ROM/RAM) Error  
P1690 Malfunction Indicator Lamp (MIL) Electrical  
P1734 Pressure Control Solenoid "B" Electrical  
P1738 Pressure Control Solenoid "C" Electrical

P1743	Pressure Control Solenoid "E" Electrical
P1744	Pressure Control Solenoid "A" Electrical
P1746	Transmission Control Module Output Stage
P1747	CAN Bus Monitoring
P1748	Transmission Control Module Self Test
P1749	Secondary Pressure Solenoid Communication Error
P1750	Secondary Pressure Solenoid Circuit Range/Performance
P1751	Secondary Pressure Solenoid Open Circuit
P1761	Shift Solenoid Malfunction
P1765	CAN Throttle Valve
P1770	CAN Torque Interface
P1780	CAN Torque Reduction
P2001	NOx Trap Efficiency Below Threshold
P2003	Particulate Trap Efficiency Below Threshold
P2005	Intake Manifold Runner Control Stuck Open
P2007	Intake Manifold Runner Control Stuck Closed
P2008	Intake Manifold Runner Control Circuit/Open
P2009	Intake Manifold Runner Control Circuit Low
P2010	Intake Manifold Runner Control Circuit High
P2011	Intake Manifold Runner Control Circuit/Open
P2012	Intake Manifold Runner Control Circuit Low
P2013	Intake Manifold Runner Control Circuit High
P2014	Intake Manifold Runner Position Sensor/Switch Circuit
P2015	Intake Manifold Runner Position Sensor/Switch Circuit Range/Performance
P2016	Intake Manifold Runner Position Sensor/Switch Circuit Low
P2017	Intake Manifold Runner Position Sensor/Switch Circuit High
P2018	Intake Manifold Runner Position Sensor/Switch Circuit Intermittent
P2019	Intake Manifold Runner Position Sensor/Switch Circuit
P2020	Intake Manifold Runner Position Sensor/Switch Circuit Range/Performance
P2021	Intake Manifold Runner Position Sensor/Switch Circuit Low
P2022	Intake Manifold Runner Position Sensor/Switch Circuit High
P2023	Intake Manifold Runner Position Sensor/Switch Circuit Intermittent
P2024	Evaporative Emissions (EVAP) Fuel Vapor Temperature Sensor Circuit
P2025	Evaporative Emissions (EVAP) Fuel Vapor Temperature Sensor Performance
P2026	Evaporative Emissions (EVAP) Fuel Vapor Temperature Sensor Circuit Low Voltage
P2027	Evaporative Emissions (EVAP) Fuel Vapor Temperature Sensor Circuit High Voltage
P2028	Evaporative Emissions (EVAP) Fuel Vapor Temperature Sensor Circuit Intermittent
P2029	Fuel Fired Heater Disabled
P2030	Fuel Fired Heater Performance
P2031	Exhaust Gas Temperature Sensor Circuit
P2032	Exhaust Gas Temperature Sensor Circuit Low
P2033	Exhaust Gas Temperature Sensor Circuit High
P2034	Exhaust Gas Temperature Sensor Circuit
P2035	Exhaust Gas Temperature Sensor Circuit Low
P2036	Exhaust Gas Temperature Sensor Circuit High
P2037	Reductant Injection Air Pressure Sensor Circuit
P2038	Reductant Injection Air Pressure Sensor Circuit Range/Performance
P2039	Reductant Injection Air Pressure Sensor Circuit Low Input
P2040	Reductant Injection Air Pressure Sensor Circuit High Input
P2041	Reductant Injection Air Pressure Sensor Circuit Intermittent
P2042	Reductant Temperature Sensor Circuit
P2043	Reductant Temperature Sensor Circuit Range/Performance
P2044	Reductant Temperature Sensor Circuit Low Input
P2045	Reductant Temperature Sensor Circuit High Input
P2046	Reductant Temperature Sensor Circuit Intermittent
P2047	Reductant Injector Circuit/Open
P2048	Reductant Injector Circuit Low
P2049	Reductant Injector Circuit High
P2050	Reductant Injector Circuit/Open
P2051	Reductant Injector Circuit Low
P2052	Reductant Injector Circuit High
P2053	Reductant Injector Circuit/Open
P2054	Reductant Injector Circuit Low
P2055	Reductant Injector Circuit High
P2056	Reductant Injector Circuit/Open
P2057	Reductant Injector Circuit Low
P2058	Reductant Injector Circuit High
P2059	Reductant Injection Air Pump Control Circuit/Open
P2060	Reductant Injection Air Pump Control Circuit Low
P2061	Reductant Injection Air Pump Control Circuit High

P2062 Reductant Supply Control Circuit/Open  
P2063 Reductant Supply Control Circuit Low  
P2064 Reductant Supply Control Circuit High  
P2065 Fuel Level Sensor "B" Circuit  
P2066 Fuel Level Sensor "B" Performance  
P2067 Fuel Level Sensor "B" Circuit Low  
P2068 Fuel Level Sensor "B" Circuit High  
P2069 Fuel Level Sensor "B" Circuit Intermittent  
P2070 Intake Manifold Tuning (IMT) Valve Stuck Open  
P2071 Intake Manifold Tuning (IMT) Valve Stuck Closed  
P2075 Intake Manifold Tuning (IMT) Valve Position Sensor/Switch Circuit  
P2076 Intake Manifold Tuning (IMT) Valve Position Sensor/Switch Circuit Range/Performance  
P2077 Intake Manifold Tuning (IMT) Valve Position Sensor/Switch Circuit Low  
P2078 Intake Manifold Tuning (IMT) Valve Position Sensor/Switch Circuit High  
P2079 Intake Manifold Tuning (IMT) Valve Position Sensor/Switch Circuit Intermittent  
P2080 Exhaust Gas Temperature Sensor Circuit Range/Performance  
P2081 Exhaust Gas Temperature Sensor Circuit Intermittent  
P2082 Exhaust Gas Temperature Sensor Circuit Range/Performance  
P2083 Exhaust Gas Temperature Sensor Circuit Intermittent  
P2084 Exhaust Gas Temperature Sensor Circuit Range/Performance  
P2085 Exhaust Gas Temperature Sensor Circuit Intermittent  
P2086 Exhaust Gas Temperature Sensor Circuit Range/Performance  
P2087 Exhaust Gas Temperature Sensor Circuit Intermittent  
P2088 "A" Camshaft Position Actuator Control Circuit Low  
P2089 "A" Camshaft Position Actuator Control Circuit High  
P2090 "B" Camshaft Position Actuator Control Circuit Low  
P2091 "B" Camshaft Position Actuator Control Circuit High  
P2092 "A" Camshaft Position Actuator Control Circuit Low  
P2093 "A" Camshaft Position Actuator Control Circuit High  
P2094 "B" Camshaft Position Actuator Control Circuit Low  
P2095 "B" Camshaft Position Actuator Control Circuit High  
P2096 Post Catalyst Fuel Trim System Too Lean  
P2097 Post Catalyst Fuel Trim System Too Rich  
P2098 Post Catalyst Fuel Trim System Too Lean  
P2099 Post Catalyst Fuel Trim System Too Rich  
P2100 Throttle Actuator Control Motor Circuit/Open  
P2101 Throttle Actuator Control Motor Circuit Range/Performance  
P2102 Throttle Actuator Control Motor Circuit Low  
P2103 Throttle Actuator Control Motor Circuit High  
P2104 Throttle Actuator Control System - Forced Idle  
P2105 Throttle Actuator Control System - Forced Engine Shutdown  
P2106 Throttle Actuator Control System - Forced Limited Power  
P2107 Throttle Actuator Control Module Processor  
P2108 Throttle Actuator Control Module Performance  
P2109 Throttle/Pedal Position Sensor "A" Minimum Stop Performance  
P2110 Throttle Actuator Control System - Forced Limited RPM  
P2111 Throttle Actuator Control System - Stuck Open  
P2112 Throttle Actuator Control System - Stuck Closed  
P2113 Throttle/Pedal Position Sensor "B" Minimum Stop Performance  
P2114 Throttle/Pedal Position Sensor "C" Minimum Stop Performance  
P2115 Throttle/Pedal Position Sensor "D" Minimum Stop Performance  
P2116 Throttle/Pedal Position Sensor "E" Minimum Stop Performance  
P2117 Throttle/Pedal Position Sensor "F" Minimum Stop Performance  
P2118 Throttle Actuator Control Motor Current Range/Performance  
P2119 Throttle Actuator Control Throttle Body Range/Performance  
P2120 Throttle/Pedal Position Sensor/Switch "D" Circuit  
P2121 Throttle/Pedal Position Sensor/Switch "D" Circuit Range/Performance  
P2122 Throttle/Pedal Position Sensor/Switch "D" Circuit Low Input  
P2123 Throttle/Pedal Position Sensor/Switch "D" Circuit High Input  
P2124 Throttle/Pedal Position Sensor/Switch "D" Circuit Intermittent  
P2125 Throttle/Pedal Position Sensor/Switch "E" Circuit  
P2126 Throttle/Pedal Position Sensor/Switch "E" Circuit Range/Performance  
P2127 Throttle/Pedal Position Sensor/Switch "E" Circuit Low Input  
P2128 Throttle/Pedal Position Sensor/Switch "E" Circuit High Input  
P2129 Throttle/Pedal Position Sensor/Switch "E" Circuit Intermittent  
P2130 Throttle/Pedal Position Sensor/Switch "F" Circuit  
P2131 Throttle/Pedal Position Sensor/Switch "F" Circuit Range Performance  
P2132 Throttle/Pedal Position Sensor/Switch "F" Circuit Low Input  
P2133 Throttle/Pedal Position Sensor/Switch "F" Circuit High Input  
P2134 Throttle/Pedal Position Sensor/Switch "F" Circuit Intermittent

P2135 Throttle/Pedal Position Sensor/Switch "A" / "B" Voltage Correlation  
P2136 Throttle/Pedal Position Sensor/Switch "A" / "C" Voltage Correlation  
P2137 Throttle/Pedal Position Sensor/Switch "B" / "C" Voltage Correlation  
P2138 Throttle/Pedal Position Sensor/Switch "D" / "E" Voltage Correlation  
P2139 Throttle/Pedal Position Sensor/Switch "D" / "F" Voltage Correlation  
P2140 Throttle/Pedal Position Sensor/Switch "E" / "F" Voltage Correlation  
P2141 Exhaust Gas Recirculation Throttle Control Circuit Low  
P2142 Exhaust Gas Recirculation Throttle Control Circuit High  
P2143 Exhaust Gas Recirculation Vent Control Circuit/Open  
P2144 Exhaust Gas Recirculation Vent Control Circuit Low  
P2145 Exhaust Gas Recirculation Vent Control Circuit High  
P2146 Fuel Injector Group "A" Supply Voltage Circuit/Open  
P2147 Fuel Injector Group "A" Supply Voltage Circuit Low  
P2148 Fuel Injector Group "A" Supply Voltage Circuit High  
P2149 Fuel Injector Group "B" Supply Voltage Circuit/Open  
P2150 Fuel Injector Group "B" Supply Voltage Circuit Low  
P2151 Fuel Injector Group "B" Supply Voltage Circuit High  
P2152 Fuel Injector Group "C" Supply Voltage Circuit/Open  
P2153 Fuel Injector Group "C" Supply Voltage Circuit Low  
P2154 Fuel Injector Group "C" Supply Voltage Circuit High  
P2155 Fuel Injector Group "D" Supply Voltage Circuit/Open  
P2156 Fuel Injector Group "D" Supply Voltage Circuit Low  
P2157 Fuel Injector Group "D" Supply Voltage Circuit High  
P2158 Vehicle Speed Sensor "B"  
P2159 Vehicle Speed Sensor "B" Range/Performance  
P2160 Vehicle Speed Sensor "B" Circuit Low  
P2161 Vehicle Speed Sensor "B" Intermittent/Erratic  
P2162 Vehicle Speed Sensor "A" / "B" Correlation  
P2163 Throttle/Pedal Position Sensor "A" Maximum Stop Performance  
P2164 Throttle/Pedal Position Sensor "B" Maximum Stop Performance  
P2165 Throttle/Pedal Position Sensor "C" Maximum Stop Performance  
P2166 Throttle/Pedal Position Sensor "D" Maximum Stop Performance  
P2167 Throttle/Pedal Position Sensor "E" Maximum Stop Performance  
P2168 Throttle/Pedal Position Sensor "F" Maximum Stop Performance  
P2169 Exhaust Pressure Regulator Vent Solenoid Control Circuit/Open  
P2170 Exhaust Pressure Regulator Vent Solenoid Control Circuit Low  
P2171 Exhaust Pressure Regulator Vent Solenoid Control Circuit High  
P2172 Throttle Actuator Control System - Sudden High Airflow Detected  
P2173 Throttle Actuator Control System - High Airflow Detected  
P2174 Throttle Actuator Control System - Sudden Low Airflow Detected  
P2175 Throttle Actuator Control System - Low Airflow Detected  
P2176 Throttle Actuator Control System - Idle Position Not Learned  
P2177 System Too Lean Off Idle  
P2178 System Too Rich Off Idle  
P2179 System Too Lean Off Idle  
P2180 System Too Rich Off Idle  
P2181 Cooling System Performance  
P2182 Engine Coolant Temperature Sensor 2 Circuit  
P2183 Engine Coolant Temperature Sensor 2 Circuit Range/Performance  
P2184 Engine Coolant Temperature Sensor 2 Circuit Low  
P2185 Engine Coolant Temperature Sensor 2 Circuit High  
P2186 Engine Coolant Temperature Sensor 2 Circuit Intermittent/Erratic  
P2187 System Too Lean at Idle  
P2188 System Too Rich at Idle  
P2189 System Too Lean at Idle  
P2190 System Too Rich at Idle  
P2191 System Too Lean at Higher Load  
P2192 System Too Rich at Higher Load  
P2193 System Too Lean at Higher Load  
P2194 System Too Rich at Higher Load  
P2195 O2 Sensor Signal Stuck Lean  
P2196 O2 Sensor Signal Stuck Rich  
P2197 O2 Sensor Signal Stuck Lean  
P2198 O2 Sensor Signal Stuck Rich  
P2199 Intake Air Temperature Sensor 1 / 2 Correlation  
P2200 NOx Sensor Circuit  
P2201 NOx Sensor Circuit Range/Performance  
P2202 NOx Sensor Circuit Low Input  
P2203 NOx Sensor Circuit High Input  
P2204 NOx Sensor Circuit Intermittent Input

P2205	NOx Sensor Heater Control Circuit/Open
P2206	NOx Sensor Heater Control Circuit Low
P2207	NOx Sensor Heater Control Circuit High
P2208	NOx Sensor Heater Sense Circuit
P2209	NOx Sensor Heater Sense Circuit Range/Performance
P2210	NOx Sensor Heater Sense Circuit Low Input
P2211	NOx Sensor Heater Sense Circuit High Input
P2212	NOx Sensor Heater Sense Circuit Intermittent
P2213	NOx Sensor Circuit
P2214	NOx Sensor Circuit Range/Performance
P2215	NOx Sensor Circuit Low Input
P2216	NOx Sensor Circuit High Input
P2217	NOx Sensor Circuit Intermittent Input
P2218	NOx Sensor Heater Control Circuit/Open
P2219	NOx Sensor Heater Control Circuit Low
P2220	NOx Sensor Heater Control Circuit High
P2221	NOx Sensor Heater Sense Circuit
P2222	NOx Sensor Heater Sense Circuit Range/Performance
P2223	NOx Sensor Heater Sense Circuit Low
P2224	NOx Sensor Heater Sense Circuit High
P2225	NOx Sensor Heater Sense Circuit Intermittent
P2226	Barometric Pressure Circuit
P2227	Barometric Pressure Circuit Range/Performance
P2228	Barometric Pressure Circuit Low
P2229	Barometric Pressure Circuit High
P2230	Barometric Pressure Circuit Intermittent
P2236	O2 Sensor Signal Circuit Shorted to Heater Circuit
P2237	O2 Sensor Positive Current Control Circuit/Open
P2238	O2 Sensor Positive Current Control Circuit Low
P2239	O2 Sensor Positive Current Control Circuit High
P2240	O2 Sensor Positive Current Control Circuit/Open
P2241	O2 Sensor Positive Current Control Circuit Low
P2242	O2 Sensor Positive Current Control Circuit High
P2243	O2 Sensor Reference Voltage Circuit/Open
P2244	O2 Sensor Reference Voltage Performance
P2245	O2 Sensor Reference Voltage Circuit Low
P2246	O2 Sensor Reference Voltage Circuit High
P2247	O2 Sensor Reference Voltage Circuit/Open
P2248	O2 Sensor Reference Voltage Performance
P2249	O2 Sensor Reference Voltage Circuit Low
P2250	O2 Sensor Reference Voltage Circuit High
P2251	O2 Sensor Negative Current Control Circuit/Open
P2252	O2 Sensor Negative Current Control Circuit Low
P2253	O2 Sensor Negative Current Control Circuit High
P2254	O2 Sensor Negative Current Control Circuit/Open
P2255	O2 Sensor Negative Current Control Circuit Low
P2256	O2 Sensor Negative Current Control Circuit High
P2257	Secondary Air Injection System Control "A" Circuit Low
P2258	Secondary Air Injection System Control "A" Circuit High
P2259	Secondary Air Injection System Control "B" Circuit Low
P2260	Secondary Air Injection System Control "B" Circuit High
P2261	Turbo/Super Charger Bypass Valve - Mechanical
P2262	Turbo Boost Pressure Not Detected - Mechanical
P2263	Turbo/Super Charger Boost System Performance
P2264	Water in Fuel Sensor Circuit
P2265	Water in Fuel Sensor Circuit Range/Performance
P2266	Water in Fuel Sensor Circuit Low
P2267	Water in Fuel Sensor Circuit High
P2268	Water in Fuel Sensor Circuit Intermittent
P2269	Water in Fuel Condition
P2270	O2 Sensor Signal Stuck Lean
P2271	O2 Sensor Signal Stuck Rich
P2272	O2 Sensor Signal Stuck Lean
P2273	O2 Sensor Signal Stuck Rich
P2274	O2 Sensor Signal Stuck Lean
P2275	O2 Sensor Signal Stuck Rich
P2276	O2 Sensor Signal Stuck Lean
P2277	O2 Sensor Signal Stuck Rich
P2278	O2 Sensor Signals Swapped Bank 1 Sensor 3 / Bank 2 Sensor 3
P2279	Intake Air System Leak

P2280 Air Flow Restriction / Air Leak Between Air Filter and MAF  
P2281 Air Leak Between MAF and Throttle Body  
P2282 Air Leak Between Throttle Body and Intake Valves  
P2283 Injector Control Pressure Sensor Circuit  
P2284 Injector Control Pressure Sensor Circuit Range/Performance  
P2285 Injector Control Pressure Sensor Circuit Low  
P2286 Injector Control Pressure Sensor Circuit High  
P2287 Injector Control Pressure Sensor Circuit Intermittent  
P2288 Injector Control Pressure Too High  
P2289 Injector Control Pressure Too High - Engine Off  
P2290 Injector Control Pressure Too Low  
P2291 Injector Control Pressure Too Low - Engine Cranking  
P2292 Injector Control Pressure Erratic  
P2293 Fuel Pressure Regulator 2 Performance  
P2294 Fuel Pressure Regulator 2 Control Circuit  
P2295 Fuel Pressure Regulator 2 Control Circuit Low  
P2296 Fuel Pressure Regulator 2 Control Circuit High  
P2298 O2 Sensor Out of Range During Deceleration  
P2299 Brake Pedal Position / Accelerator Pedal Position Incompatible  
P2300 Ignition Coil "A" Primary Control Circuit Low  
P2301 Ignition Coil "A" Primary Control Circuit High  
P2302 Ignition Coil "A" Secondary Circuit  
P2303 Ignition Coil "B" Primary Control Circuit Low  
P2304 Ignition Coil "B" Primary Control Circuit High  
P2305 Ignition Coil "B" Secondary Circuit  
P2306 Ignition Coil "C" Primary Control Circuit Low  
P2307 Ignition Coil "C" Primary Control Circuit High  
P2308 Ignition Coil "C" Secondary Circuit  
P2309 Ignition Coil "D" Primary Control Circuit Low  
P2310 Ignition Coil "D" Primary Control Circuit High  
P2311 Ignition Coil "D" Secondary Circuit  
P2312 Ignition Coil "E" Primary Control Circuit Low  
P2313 Ignition Coil "E" Primary Control Circuit High  
P2314 Ignition Coil "E" Secondary Circuit  
P2315 Ignition Coil "F" Primary Control Circuit Low  
P2316 Ignition Coil "F" Primary Control Circuit High  
P2317 Ignition Coil "F" Secondary Circuit  
P2318 Ignition Coil "G" Primary Control Circuit Low  
P2319 Ignition Coil "G" Primary Control Circuit High  
P2320 Ignition Coil "G" Secondary Circuit  
P2321 Ignition Coil "H" Primary Control Circuit Low  
P2322 Ignition Coil "H" Primary Control Circuit High  
P2323 Ignition Coil "H" Secondary Circuit  
P2324 Ignition Coil "I" Primary Control Circuit Low  
P2325 Ignition Coil "I" Primary Control Circuit High  
P2326 Ignition Coil "I" Secondary Circuit  
P2327 Ignition Coil "J" Primary Control Circuit Low  
P2328 Ignition Coil "J" Primary Control Circuit High  
P2329 Ignition Coil "J" Secondary Circuit  
P2330 Ignition Coil "K" Primary Control Circuit Low  
P2331 Ignition Coil "K" Primary Control Circuit High  
P2332 Ignition Coil "K" Secondary Circuit  
P2333 Ignition Coil "L" Primary Control Circuit Low  
P2334 Ignition Coil "L" Primary Control Circuit High  
P2335 Ignition Coil "L" Secondary Circuit  
P2336 Cylinder #1 Above Knock Threshold  
P2337 Cylinder #2 Above Knock Threshold  
P2338 Cylinder #3 Above Knock Threshold  
P2339 Cylinder #4 Above Knock Threshold  
P2340 Cylinder #5 Above Knock Threshold  
P2341 Cylinder #6 Above Knock Threshold  
P2342 Cylinder #7 Above Knock Threshold  
P2343 Cylinder #8 Above Knock Threshold  
P2344 Cylinder #9 Above Knock Threshold  
P2345 Cylinder #10 Above Knock Threshold  
P2346 Cylinder #11 Above Knock Threshold  
P2347 Cylinder #12 Above Knock Threshold  
P2400 Evaporative Emission System Leak Detection Pump Control Circuit/Open  
P2401 Evaporative Emission System Leak Detection Pump Control Circuit Low  
P2402 Evaporative Emission System Leak Detection Pump Control Circuit High



P2403 Evaporative Emission System Leak Detection Pump Sense Circuit/Open  
P2404 Evaporative Emission System Leak Detection Pump Sense Circuit Range/Performance  
P2405 Evaporative Emission System Leak Detection Pump Sense Circuit Low  
P2406 Evaporative Emission System Leak Detection Pump Sense Circuit High  
P2407 Evaporative Emission System Leak Detection Pump Sense Circuit Intermittent/Erratic  
P2408 Fuel Cap Sensor/Switch Circuit  
P2409 Fuel Cap Sensor/Switch Circuit Range/Performance  
P2410 Fuel Cap Sensor/Switch Circuit Low  
P2411 Fuel Cap Sensor/Switch Circuit High  
P2412 Fuel Cap Sensor/Switch Circuit Intermittent/Erratic  
P2413 Exhaust Gas Recirculation System Performance  
P2415 O2 Sensor Exhaust Sample Error  
P2416 O2 Sensor Signals Swapped Bank 1 Sensor 2 / Bank 1 Sensor 3  
P2417 O2 Sensor Signals Swapped Bank 2 Sensor 2 / Bank 2 Sensor 3  
P2418 Evaporative Emission System Switching Valve Control Circuit / Open  
P2419 Evaporative Emission System Switching Valve Control Circuit Low  
P2420 Evaporative Emission System Switching Valve Control Circuit High  
P2421 Evaporative Emission System Vent Valve Stuck Open  
P2422 Evaporative Emission System Vent Valve Stuck Closed  
P2424 HC Adsorption Catalyst Efficiency Below Threshold  
P2425 Exhaust Gas Recirculation Cooling Valve Control Circuit/Open  
P2426 Exhaust Gas Recirculation Cooling Valve Control Circuit Low  
P2427 Exhaust Gas Recirculation Cooling Valve Control Circuit High  
P2429 Exhaust Gas Temperature Too High  
P2430 Secondary Air Injection System Air Flow/Pressure Sensor Circuit  
P2431 Secondary Air Injection System Air Flow/Pressure Sensor Circuit Range/Performance  
P2432 Secondary Air Injection System Air Flow/Pressure Sensor Circuit Low  
P2433 Secondary Air Injection System Air Flow/Pressure Sensor Circuit High  
P2434 Secondary Air Injection System Air Flow/Pressure Sensor Circuit Intermittent/Erratic  
P2435 Secondary Air Injection System Air Flow/Pressure Sensor Circuit  
P2436 Secondary Air Injection System Air Flow/Pressure Sensor Circuit Range/Performance  
P2437 Secondary Air Injection System Air Flow/Pressure Sensor Circuit Low  
P2438 Secondary Air Injection System Air Flow/Pressure Sensor Circuit High  
P2439 Secondary Air Injection System Air Flow/Pressure Sensor Circuit Intermittent/Erratic  
P2440 Secondary Air Injection System Switching Valve Stuck Open  
P2441 Secondary Air Injection System Switching Valve Stuck Closed  
P2442 Secondary Air Injection System Switching Valve Stuck Open  
P2443 Secondary Air Injection System Switching Valve Stuck Closed  
P2444 Secondary Air Injection System Pump Stuck On  
P2445 Secondary Air Injection System Pump Stuck Off  
P2446 Secondary Air Injection System Pump Stuck On  
P2447 Secondary Air Injection System Pump Stuck Off  
P2500 Generator Lamp/L-Terminal Circuit Low  
P2501 Generator Lamp/L-Terminal Circuit High  
P2502 Charging System Voltage  
P2503 Charging System Voltage Low  
P2504 Charging System Voltage High  
P2505 ECM/PCM Power Input Signal  
P2506 ECM/PCM Power Input Signal Range/Performance  
P2507 ECM/PCM Power Input Signal Low  
P2508 ECM/PCM Power Input Signal High  
P2509 ECM/PCM Power Input Signal Intermittent  
P2510 ECM/PCM Power Relay Sense Circuit Range/Performance  
P2511 ECM/PCM Power Relay Sense Circuit Intermittent  
P2512 Event Data Recorder Request Circuit/ Open  
P2513 Event Data Recorder Request Circuit Low  
P2514 Event Data Recorder Request Circuit High  
P2515 A/C Refrigerant Pressure Sensor "B" Circuit  
P2516 A/C Refrigerant Pressure Sensor "B" Circuit Range/Performance  
P2517 A/C Refrigerant Pressure Sensor "B" Circuit Low  
P2518 A/C Refrigerant Pressure Sensor "B" Circuit High  
P2519 A/C Request "A" Circuit  
P2520 A/C Request "A" Circuit Low  
P2521 A/C Request "A" Circuit High  
P2522 A/C Request "B" Circuit  
P2523 A/C Request "B" Circuit Low  
P2524 A/C Request "B" Circuit High  
P2525 Vacuum Reservoir Pressure Sensor Circuit  
P2526 Vacuum Reservoir Pressure Sensor Circuit Range/Performance  
P2527 Vacuum Reservoir Pressure Sensor Circuit Low

P2528 Vacuum Reservoir Pressure Sensor Circuit High  
P2529 Vacuum Reservoir Pressure Sensor Circuit Intermittent  
P2530 Ignition Switch Run Position Circuit  
P2531 Ignition Switch Run Position Circuit Low  
P2532 Ignition Switch Run Position Circuit High  
P2533 Ignition Switch Run/Start Position Circuit  
P2534 Ignition Switch Run/Start Position Circuit Low  
P2535 Ignition Switch Run/Start Position Circuit High  
P2536 Ignition Switch Accessory Position Circuit  
P2537 Ignition Switch Accessory Position Circuit Low  
P2538 Ignition Switch Accessory Position Circuit High  
P2539 Low Pressure Fuel System Sensor Circuit  
P2540 Low Pressure Fuel System Sensor Circuit Range/Performance  
P2541 Low Pressure Fuel System Sensor Circuit Low  
P2542 Low Pressure Fuel System Sensor Circuit High  
P2543 Low Pressure Fuel System Sensor Circuit Intermittent  
P2544 Torque Management Request Input Signal "A"  
P2545 Torque Management Request Input Signal "A" Range/Performance  
P2546 Torque Management Request Input Signal "A" Low  
P2547 Torque Management Request Input Signal "A" High  
P2548 Torque Management Request Input Signal "B"  
P2549 Torque Management Request Input Signal "B" Range/Performance  
P2550 Torque Management Request Input Signal "B" Low  
P2551 Torque Management Request Input Signal "B" High  
P2552 Throttle/Fuel Inhibit Circuit  
P2553 Throttle/Fuel Inhibit Circuit Range/Performance  
P2554 Throttle/Fuel Inhibit Circuit Low  
P2555 Throttle/Fuel Inhibit Circuit High  
P2556 Engine Coolant Level Sensor/Switch Circuit  
P2557 Engine Coolant Level Sensor/Switch Circuit Range/Performance  
P2558 Engine Coolant Level Sensor/Switch Circuit Low  
P2559 Engine Coolant Level Sensor/Switch Circuit High  
P2560 Engine Coolant Level Low  
P2561 A/C Control Module Requested MIL Illumination  
P2562 Turbocharger Boost Control Position Sensor Circuit  
P2563 Turbocharger Boost Control Position Sensor Circuit Range/Performance  
P2564 Turbocharger Boost Control Position Sensor Circuit Low  
P2565 Turbocharger Boost Control Position Sensor Circuit High  
P2566 Turbocharger Boost Control Position Sensor Circuit Intermittent  
P2567 Direct Ozone Reduction Catalyst Temperature Sensor Circuit  
P2568 Direct Ozone Reduction Catalyst Temperature Sensor Circuit Range/Performance  
P2569 Direct Ozone Reduction Catalyst Temperature Sensor Circuit Low  
P2570 Direct Ozone Reduction Catalyst Temperature Sensor Circuit High  
P2571 Direct Ozone Reduction Catalyst Temperature Sensor Circuit Intermittent/Erratic  
P2572 Direct Ozone Reduction Catalyst Deterioration Sensor Circuit  
P2573 Direct Ozone Reduction Catalyst Deterioration Sensor Circuit Range/Performance  
P2574 Direct Ozone Reduction Catalyst Deterioration Sensor Circuit Low  
P2575 Direct Ozone Reduction Catalyst Deterioration Sensor Circuit High  
P2576 Direct Ozone Reduction Catalyst Deterioration Sensor Circuit Intermittent/Erratic  
P2577 Direct Ozone Reduction Catalyst Efficiency Below Threshold  
P2600 Coolant Pump Control Circuit/Open  
P2600 Coolant Pump Control Circuit/Open  
P2601 Coolant Pump Control Circuit Range/Performance  
P2602 Coolant Pump Control Circuit Low  
P2603 Coolant Pump Control Circuit High  
P2604 Intake Air Heater "A" Circuit Range/Performance  
P2605 Intake Air Heater "A" Circuit/Open  
P2606 Intake Air Heater "B" Circuit Range/Performance  
P2607 Intake Air Heater "B" Circuit Low  
P2608 Intake Air Heater "B" Circuit High  
P2609 Intake Air Heater System Performance  
P2610 ECM/PCM Internal Engine Off Timer Performance  
P2611 A/C Refrigerant Distribution Valve Control Circuit/Open  
P2612 A/C Refrigerant Distribution Valve Control Circuit Low  
P2613 A/C Refrigerant Distribution Valve Control Circuit High  
P2614 Camshaft Position Signal Output Circuit/Open  
P2615 Camshaft Position Signal Output Circuit Low  
P2616 Camshaft Position Signal Output Circuit High  
P2617 Crankshaft Position Signal Output Circuit/Open  
P2618 Crankshaft Position Signal Output Circuit Low

P2619 Crankshaft Position Signal Output Circuit High  
P2620 Throttle Position Output Circuit/Open  
P2621 Throttle Position Output Circuit Low  
P2622 Throttle Position Output Circuit High  
P2623 Injector Control Pressure Regulator Circuit/Open  
P2624 Injector Control Pressure Regulator Circuit Low  
P2625 Injector Control Pressure Regulator Circuit High  
P2626 O2 Sensor Pumping Current Trim Circuit/Open  
P2627 O2 Sensor Pumping Current Trim Circuit Low  
P2628 O2 Sensor Pumping Current Trim Circuit High  
P2629 O2 Sensor Pumping Current Trim Circuit/Open  
P2630 O2 Sensor Pumping Current Trim Circuit Low  
P2631 O2 Sensor Pumping Current Trim Circuit High  
P2632 Fuel Pump "B" Control Circuit /Open  
P2633 Fuel Pump "B" Control Circuit Low  
P2634 Fuel Pump "B" Control Circuit High  
P2635 Fuel Pump "A" Low Flow / Performance  
P2636 Fuel Pump "B" Low Flow / Performance  
P2637 Torque Management Feedback Signal "A"  
P2638 Torque Management Feedback Signal "A" Range/Performance  
P2639 Torque Management Feedback Signal "A" Low  
P2640 Torque Management Feedback Signal "A" High  
P2641 Torque Management Feedback Signal "B"  
P2642 Torque Management Feedback Signal "B" Range/Performance  
P2643 Torque Management Feedback Signal "B" Low  
P2644 Torque Management Feedback Signal "B" High  
P2645 "A" Rocker Arm Actuator Control Circuit/Open  
P2646 "A" Rocker Arm Actuator System Performance or Stuck Off  
P2647 "A" Rocker Arm Actuator System Stuck On  
P2648 "A" Rocker Arm Actuator Control Circuit Low  
P2649 "A" Rocker Arm Actuator Control Circuit High  
P2650 "B" Rocker Arm Actuator Control Circuit/Open  
P2651 "B" Rocker Arm Actuator System Performance or Stuck Off  
P2652 "B" Rocker Arm Actuator System Stuck On  
P2653 "B" Rocker Arm Actuator Control Circuit Low  
P2654 "B" Rocker Arm Actuator Control Circuit High  
P2655 "A" Rocker Arm Actuator Control Circuit/Open  
P2656 "A" Rocker Arm Actuator System Performance or Stuck Off  
P2657 "A" Rocker Arm Actuator System Stuck On  
P2658 "A" Rocker Arm Actuator Control Circuit Low  
P2659 "A" Rocker Arm Actuator Control Circuit High  
P2660 "B" Rocker Arm Actuator Control Circuit/Open  
P2661 "B" Rocker Arm Actuator System Performance or Stuck Off  
P2662 "B" Rocker Arm Actuator System Stuck On  
P2663 "B" Rocker Arm Actuator Control Circuit Low  
P2664 "B" Rocker Arm Actuator Control Circuit High  
P2665 Fuel Shutoff Valve "B" Control Circuit/Open  
P2666 Fuel Shutoff Valve "B" Control Circuit Low  
P2667 Fuel Shutoff Valve "B" Control Circuit High  
P2668 Fuel Mode Indicator Lamp Control Circuit  
P2669 Actuator Supply Voltage "B" Circuit /Open  
P2670 Actuator Supply Voltage "B" Circuit Low  
P2671 Actuator Supply Voltage "B" Circuit High  
P2700 Transmission Friction Element "A" Apply Time Range/Performance  
P2701 Transmission Friction Element "B" Apply Time Range/Performance  
P2702 Transmission Friction Element "C" Apply Time Range/Performance  
P2703 Transmission Friction Element "D" Apply Time Range/Performance  
P2704 Transmission Friction Element "E" Apply Time Range/Performance  
P2705 Transmission Friction Element "F" Apply Time Range/Performance  
P2706 Shift Solenoid "F"  
P2707 Shift Solenoid "F" Performance or Stuck Off  
P2708 Shift Solenoid "F" Stuck On  
P2709 Shift Solenoid "F" Electrical  
P2710 Shift Solenoid "F" Intermittent  
P2711 Unexpected Mechanical Gear Disengagement  
P2712 Hydraulic Power Unit Leakage  
P2713 Pressure Control Solenoid "D"  
P2714 Pressure Control Solenoid "D" Performance or Stuck Off  
P2715 Pressure Control Solenoid "D" Stuck On  
P2716 Pressure Control Solenoid "D" Electrical

P2717 Pressure Control Solenoid "D" Intermittent  
P2718 Pressure Control Solenoid "D" Control Circuit / Open  
P2719 Pressure Control Solenoid "D" Control Circuit Range/Performance  
P2720 Pressure Control Solenoid "D" Control Circuit Low  
P2721 Pressure Control Solenoid "D" Control Circuit High  
P2722 Pressure Control Solenoid "E"  
P2723 Pressure Control Solenoid "E" Performance or Stuck Off  
P2724 Pressure Control Solenoid "E" Stuck On  
P2725 Pressure Control Solenoid "E" Electrical  
P2726 Pressure Control Solenoid "E" Intermittent  
P2727 Pressure Control Solenoid "E" Control Circuit / Open  
P2728 Pressure Control Solenoid "E" Control Circuit Range/Performance  
P2729 Pressure Control Solenoid "E" Control Circuit Low  
P2730 Pressure Control Solenoid "E" Control Circuit High  
P2731 Pressure Control Solenoid "F"  
P2732 Pressure Control Solenoid "F" Performance or Stuck Off  
P2733 Pressure Control Solenoid "F" Stuck On  
P2734 Pressure Control Solenoid "F" Electrical  
P2735 Pressure Control Solenoid "F" Intermittent  
P2736 Pressure Control Solenoid "F" Control Circuit/Open  
P2737 Pressure Control Solenoid "F" Control Circuit Range/Performance  
P2738 Pressure Control Solenoid "F" Control Circuit Low  
P2739 Pressure Control Solenoid "F" Control Circuit High  
P2740 Transmission Fluid Temperature Sensor "B" Circuit"  
P2741 Transmission Fluid Temperature Sensor "B" Circuit Range Performance  
P2742 Transmission Fluid Temperature Sensor "B" Circuit Low  
P2743 Transmission Fluid Temperature Sensor "B" Circuit High  
P2744 Transmission Fluid Temperature Sensor "B" Circuit Intermittent  
P2745 Intermediate Shaft Speed Sensor "B" Circuit  
P2746 Intermediate Shaft Speed Sensor "B" Circuit Range/Performance  
P2747 Intermediate Shaft Speed Sensor "B" Circuit No Signal  
P2748 Intermediate Shaft Speed Sensor "B" Circuit Intermittent  
P2749 Intermediate Shaft Speed Sensor "C" Circuit  
P2750 Intermediate Shaft Speed Sensor "C" Circuit Range/Performance  
P2751 Intermediate Shaft Speed Sensor "C" Circuit No Signal  
P2752 Intermediate Shaft Speed Sensor "C" Circuit Intermittent  
P2753 Transmission Fluid Cooler Control Circuit/Open  
P2754 Transmission Fluid Cooler Control Circuit Low  
P2755 Transmission Fluid Cooler Control Circuit High  
P2756 Torque Converter Clutch Pressure Control Solenoid  
P2757 Torque Converter Clutch Pressure Control Solenoid Control Circuit Performance or Stuck Off  
P2758 Torque Converter Clutch Pressure Control Solenoid Control Circuit Stuck On  
P2759 Torque Converter Clutch Pressure Control Solenoid Control Circuit Electrical  
P2760 Torque Converter Clutch Pressure Control Solenoid Control Circuit Intermittent  
P2761 Torque Converter Clutch Pressure Control Solenoid Control Circuit/Open  
P2762 Torque Converter Clutch Pressure Control Solenoid Control Circuit Range/Performance  
P2763 Torque Converter Clutch Pressure Control Solenoid Control Circuit High  
P2764 Torque Converter Clutch Pressure Control Solenoid Control Circuit Low  
P2765 Input/Turbine Speed Sensor "B" Circuit  
P2766 Input/Turbine Speed Sensor "B" Circuit Range/Performance  
P2767 Input/Turbine Speed Sensor "B" Circuit No Signal  
P2768 Input/Turbine Speed Sensor "B" Circuit Intermittent  
P2769 Torque Converter Clutch Circuit Low  
P2770 Torque Converter Clutch Circuit High  
P2771 Four Wheel Drive (4WD) Low Switch Circuit  
P2772 Four Wheel Drive (4WD) Low Switch Circuit Range/Performance  
P2773 Four Wheel Drive (4WD) Low Switch Circuit Low  
P2774 Four Wheel Drive (4WD) Low Switch Circuit High  
P2775 Upshift Switch Circuit Range/Performance  
P2776 Upshift Switch Circuit Low  
P2777 Upshift Switch Circuit High  
P2778 Upshift Switch Circuit Intermittent/Erratic  
P2779 Downshift Switch Circuit Range/Performance  
P2780 Downshift Switch Circuit Low  
P2781 Downshift Switch Circuit High  
P2782 Downshift Switch Circuit Intermittent/Erratic  
P2783 Torque Converter Temperature Too High  
P2784 Input/Turbine Speed Sensor "A"/"B" Correlation  
P2785 Clutch Actuator Temperature Too High  
P2786 Gear Shift Actuator Temperature Too High

P2787 Clutch Temperature Too High  
P2788 Auto Shift Manual Adaptive Learning at Limit  
P2789 Clutch Adaptive Learning at Limit  
P2790 Gate Select Direction Circuit  
P2791 Gate Select Direction Circuit Low  
P2792 Gate Select Direction Circuit High  
P2793 Gear Shift Direction Circuit  
P2794 Gear Shift Direction Circuit Low  
P2795 Gear Shift Direction Circuit High  
P2A05 O2 Sensor Circuit Range/Performance  
P3400 Cylinder Deactivation System  
P3401 Cylinder 1 Deactivation/Intake Valve Control Circuit/Open  
P3402 Cylinder 1 Deactivation/Intake Valve Control Performance  
P3403 Cylinder 1 Deactivation/Intake Valve Control Circuit Low  
P3404 Cylinder 1 Deactivation/Intake Valve Control Circuit High  
P3405 Cylinder 1 Exhaust Valve Control Circuit/Open  
P3406 Cylinder 1 Exhaust Valve Control Performance  
P3407 Cylinder 1 Exhaust Valve Control Circuit Low  
P3408 Cylinder 1 Exhaust Valve Control Circuit High  
P3409 Cylinder 2 Deactivation/Intake Valve Control Circuit/Open  
P3410 Cylinder 2 Deactivation/Intake Valve Control Performance  
P3411 Cylinder 2 Deactivation/Intake Valve Control Circuit Low  
P3412 Cylinder 2 Deactivation/Intake Valve Control Circuit High  
P3413 Cylinder 2 Exhaust Valve Control Circuit/Open  
P3414 Cylinder 2 Exhaust Valve Control Performance  
P3415 Cylinder 2 Exhaust Valve Control Circuit Low  
P3416 Cylinder 2 Exhaust Valve Control Circuit High  
P3417 Cylinder 3 Deactivation/Intake Valve Control Circuit/Open  
P3418 Cylinder 3 Deactivation/Intake Valve Control Performance  
P3419 Cylinder 3 Deactivation/Intake Valve Control Circuit Low  
P3420 Cylinder 3 Deactivation/Intake Valve Control Circuit High  
P3421 Cylinder 3 Exhaust Valve Control Circuit/Open  
P3422 Cylinder 3 Exhaust Valve Control Performance  
P3423 Cylinder 3 Exhaust Valve Control Circuit Low  
P3424 Cylinder 3 Exhaust Valve Control Circuit High  
P3425 Cylinder 4 Deactivation/Intake Valve Control Circuit/Open  
P3426 Cylinder 4 Deactivation/Intake Valve Control Performance  
P3427 Cylinder 4 Deactivation/Intake Valve Control Circuit Low  
P3428 Cylinder 4 Deactivation/Intake Valve Control Circuit High  
P3429 Cylinder 4 Exhaust Valve Control Circuit/Open  
P3430 Cylinder 4 Exhaust Valve Control Performance  
P3431 Cylinder 4 Exhaust Valve Control Circuit Low  
P3432 Cylinder 4 Exhaust Valve Control Circuit High  
P3433 Cylinder 5 Deactivation/Intake Valve Control Circuit/Open  
P3434 Cylinder 5 Deactivation/Intake Valve Control Performance  
P3435 Cylinder 5 Deactivation/Intake Valve Control Circuit Low  
P3436 Cylinder 5 Deactivation/Intake Valve Control Circuit High  
P3437 Cylinder 5 Exhaust Valve Control Circuit/Open  
P3438 Cylinder 5 Exhaust Valve Control Performance  
P3439 Cylinder 5 Exhaust Valve Control Circuit Low  
P3440 Cylinder 5 Exhaust Valve Control Circuit High  
P3441 Cylinder 6 Deactivation/Intake Valve Control Circuit/Open  
P3442 Cylinder 6 Deactivation/Intake Valve Control Performance  
P3443 Cylinder 6 Deactivation/Intake Valve Control Circuit Low  
P3444 Cylinder 6 Deactivation/Intake Valve Control Circuit High  
P3445 Cylinder 6 Exhaust Valve Control Circuit/Open  
P3446 Cylinder 6 Exhaust Valve Control Performance  
P3447 Cylinder 6 Exhaust Valve Control Circuit Low  
P3448 Cylinder 6 Exhaust Valve Control Circuit High  
P3449 Cylinder 7 Deactivation/Intake Valve Control Circuit/Open  
P3450 Cylinder 7 Deactivation/Intake Valve Control Performance  
P3451 Cylinder 7 Deactivation/Intake Valve Control Circuit Low  
P3452 Cylinder 7 Deactivation/Intake Valve Control Circuit High  
P3453 Cylinder 7 Exhaust Valve Control Circuit/Open  
P3454 Cylinder 7 Exhaust Valve Control Performance  
P3455 Cylinder 7 Exhaust Valve Control Circuit Low  
P3456 Cylinder 7 Exhaust Valve Control Circuit High  
P3457 Cylinder 8 Deactivation/Intake Valve Control Circuit/Open  
P3458 Cylinder 8 Deactivation/Intake Valve Control Performance  
P3459 Cylinder 8 Deactivation/Intake Valve Control Circuit Low

P3460 Cylinder 8 Deactivation/Intake Valve Control Circuit High  
 P3461 Cylinder 8 Exhaust Valve Control Circuit/Open  
 P3462 Cylinder 8 Exhaust Valve Control Performance  
 P3463 Cylinder 8 Exhaust Valve Control Circuit Low  
 P3464 Cylinder 8 Exhaust Valve Control Circuit High  
 P3465 Cylinder 9 Deactivation/Intake Valve Control Circuit/Open  
 P3466 Cylinder 9 Deactivation/Intake Valve Control Performance  
 P3467 Cylinder 9 Deactivation/Intake Valve Control Circuit Low  
 P3468 Cylinder 9 Deactivation/Intake Valve Control Circuit High  
 P3469 Cylinder 9 Exhaust Valve Control Circuit/Open  
 P3470 Cylinder 9 Exhaust Valve Control Performance  
 P3471 Cylinder 9 Exhaust Valve Control Circuit Low  
 P3472 Cylinder 9 Exhaust Valve Control Circuit High  
 P3473 Cylinder 10 Deactivation/Intake Valve Control Circuit/Open  
 P3474 Cylinder 10 Deactivation/Intake Valve Control Performance  
 P3475 Cylinder 10 Deactivation/Intake Valve Control Circuit Low  
 P3476 Cylinder 10 Deactivation/Intake Valve Control Circuit High  
 P3477 Cylinder 10 Exhaust Valve Control Circuit/Open  
 P3478 Cylinder 10 Exhaust Valve Control Performance  
 P3479 Cylinder 10 Exhaust Valve Control Circuit Low  
 P3480 Cylinder 10 Exhaust Valve Control Circuit High  
 P3481 Cylinder 11 Deactivation/Intake Valve Control Circuit/Open  
 P3482 Cylinder 11 Deactivation/Intake Valve Control Performance  
 P3483 Cylinder 11 Deactivation/Intake Valve Control Circuit Low  
 P3484 Cylinder 11 Deactivation/Intake Valve Control Circuit High  
 P3485 Cylinder 11 Exhaust Valve Control Circuit/Open  
 P3486 Cylinder 11 Exhaust Valve Control Performance  
 P3487 Cylinder 11 Exhaust Valve Control Circuit Low  
 P3488 Cylinder 11 Exhaust Valve Control Circuit High  
 P3489 Cylinder 12 Deactivation/Intake Valve Control Circuit/Open  
 P3490 Cylinder 12 Deactivation/Intake Valve Control Performance  
 P3491 Cylinder 12 Deactivation/Intake Valve Control Circuit Low  
 P3492 Cylinder 12 Deactivation/Intake Valve Control Circuit High  
 P3493 Cylinder 12 Exhaust Valve Control Circuit/Open  
 P3494 Cylinder 12 Exhaust Valve Control Performance  
 P3495 Cylinder 12 Exhaust Valve Control Circuit Low  
 P3496 Cylinder 12 Exhaust Valve Control Circuit High  
 P3497 Cylinder Deactivation System [/B]  
 Power rain codes continued:  
 U0001 High Speed CAN Communication Bus  
 U0002 High Speed CAN Communication Bus Performance  
 U0003 High Speed CAN Communication Bus (+) Open  
 U0004 High Speed CAN Communication Bus (+) Low  
 U0005 High Speed CAN Communication Bus (+) High  
 U0006 High Speed CAN Communication Bus (-) Open  
 U0007 High Speed CAN Communication Bus (-) Low  
 U0008 High Speed CAN Communication Bus (-) High  
 U0009 High Speed CAN Communication Bus (-) shorted to Bus (+)  
 U0010 Medium Speed CAN Communication Bus  
 U0011 Medium Speed CAN Communication Bus Performance  
 U0012 Medium Speed CAN Communication Bus (+) Open  
 U0013 Medium Speed CAN Communication Bus (+) Low  
 U0014 Medium Speed CAN Communication Bus (+) High  
 U0015 Medium Speed CAN Communication Bus (-) Open  
 U0016 Medium Speed CAN Communication Bus (-) Low  
 U0017 Medium Speed CAN Communication Bus (-) High  
 U0018 Medium Speed CAN Communication Bus (-) shorted to Bus (+)  
 U0019 Low Speed CAN Communication Bus  
 U0020 Low Speed CAN Communication Bus Performance  
 U0021 Low Speed CAN Communication Bus (+) Open  
 U0022 Low Speed CAN Communication Bus (+) Low  
 U0023 Low Speed CAN Communication Bus (+) High  
 U0024 Low Speed CAN Communication Bus (-) Open  
 U0025 Low Speed CAN Communication Bus (-) Low  
 U0026 Low Speed CAN Communication Bus (-) High  
 U0027 Low Speed CAN Communication Bus (-) shorted to Bus (+)  
 U0028 Vehicle Communication Bus A  
 U0029 Vehicle Communication Bus A Performance  
 U0030 Vehicle Communication Bus A (+) Open  
 U0031 Vehicle Communication Bus A (+) Low

U0032 Vehicle Communication Bus A (+) High  
U0033 Vehicle Communication Bus A (-) Open  
U0034 Vehicle Communication Bus A (-) Low  
U0035 Vehicle Communication Bus A (-) High  
U0036 Vehicle Communication Bus A (-) shorted to Bus A (+)  
U0037 Vehicle Communication Bus B  
U0038 Vehicle Communication Bus B Performance  
U0039 Vehicle Communication Bus B (+) Open  
U0040 Vehicle Communication Bus B (+) Low  
U0041 Vehicle Communication Bus B (+) High  
U0042 Vehicle Communication Bus B (-) Open  
U0043 Vehicle Communication Bus B (-) Low  
U0044 Vehicle Communication Bus B (-) High  
U0045 Vehicle Communication Bus B (-) shorted to Bus B (+)  
U0046 Vehicle Communication Bus C  
U0047 Vehicle Communication Bus C Performance  
U0048 Vehicle Communication Bus C (+) Open  
U0049 Vehicle Communication Bus C (+) Low  
U0050 Vehicle Communication Bus C (+) High  
U0051 Vehicle Communication Bus C (-) Open  
U0052 Vehicle Communication Bus C (-) Low  
U0053 Vehicle Communication Bus C (-) High  
U0054 Vehicle Communication Bus C (-) shorted to Bus C (+)  
U0055 Vehicle Communication Bus D  
U0056 Vehicle Communication Bus D Performance  
U0057 Vehicle Communication Bus D (+) Open  
U0058 Vehicle Communication Bus D (+) Low  
U0059 Vehicle Communication Bus D (+) High  
U0060 Vehicle Communication Bus D (-) Open  
U0061 Vehicle Communication Bus D (-) Low  
U0062 Vehicle Communication Bus D (-) High  
U0063 Vehicle Communication Bus D (-) shorted to Bus D (+)  
U0064 Vehicle Communication Bus E  
U0065 Vehicle Communication Bus E Performance  
U0066 Vehicle Communication Bus E (+) Open  
U0067 Vehicle Communication Bus E (+) Low  
U0068 Vehicle Communication Bus E (+) High  
U0069 Vehicle Communication Bus E (-) Open  
U0070 Vehicle Communication Bus E (-) Low  
U0071 Vehicle Communication Bus E (-) High  
U0072 Vehicle Communication Bus E (-) shorted to Bus E (+)  
U0073 Control Module Communication Bus Off  
U0099 Reserved by Document  
U0100 Lost Communication With ECM/PCM "A"  
U0101 Lost Communication with TCM  
U0102 Lost Communication with Transfer Case Control Module  
U0103 Lost Communication With Gear Shift Module  
U0104 Lost Communication With Cruise Control Module  
U0105 Lost Communication With Fuel Injector Control Module  
U0106 Lost Communication With Glow Plug Control Module  
U0107 Lost Communication With Throttle Actuator Control Module  
U0108 Lost Communication With Alternative Fuel Control Module  
U0109 Lost Communication With Fuel Pump Control Module  
U0110 Lost Communication With Drive Motor Control Module  
U0111 Lost Communication With Battery Energy Control Module "A"  
U0112 Lost Communication With Battery Energy Control Module "B"  
U0113 Lost Communication With Emissions Critical Control Information  
U0114 Lost Communication With Four-Wheel Drive Clutch Control Module  
U0115 Lost Communication With ECM/PCM "B"  
U0120 Reserved by Document  
U0121 Lost Communication With Anti-Lock Brake System (ABS) Control Module  
U0122 Lost Communication With Vehicle Dynamics Control Module  
U0123 Lost Communication With Yaw Rate Sensor Module  
U0124 Lost Communication With Lateral Acceleration Sensor Module  
U0125 Lost Communication With Multi-axis Acceleration Sensor Module  
U0126 Lost Communication With Steering Angle Sensor Module  
U0127 Lost Communication With Tire Pressure Monitor Module  
U0128 Lost Communication With Park Brake Control Module  
U0129 Lost Communication With Brake System Control Module  
U0130 Lost Communication With Steering Effort Control Module

U0131 Lost Communication With Power Steering Control Module  
U0132 Lost Communication With Ride Level Control Module  
U0139 Reserved by Document  
U0140 Lost Communication With Body Control Module  
U0141 Lost Communication With Body Control Module "A"  
U0142 Lost Communication With Body Control Module "B"  
U0143 Lost Communication With Body Control Module "C"  
U0144 Lost Communication With Body Control Module "D"  
U0145 Lost Communication With Body Control Module "E"  
U0146 Lost Communication With Gateway "A"  
U0147 Lost Communication With Gateway "B"  
U0148 Lost Communication With Gateway "C"  
U0149 Lost Communication With Gateway "D"  
U0150 Lost Communication With Gateway "E"  
U0151 Lost Communication With Restraints Control Module  
U0153 Lost Communication With Side Restraints Control Module  
U0154 Lost Communication With Restraints Occupant Sensing Control Module  
U0155 Lost Communication With Instrument Panel Cluster (IPC) Control Module  
U0156 Lost Communication With Information Center "A"  
U0157 Lost Communication With Information Center "B"  
U0158 Lost Communication With Head Up Display  
U0159 Lost Communication With Parking Assist Control Module  
U0160 Lost Communication With Audible Alert Control Module  
U0161 Lost Communication With Compass Module  
U0162 Lost Communication With Navigation Display Module  
U0163 Lost Communication With Navigation Control Module  
U0165 Lost Communication With HVAC Control Module  
U0166 Lost Communication With Auxiliary Heater Control Module  
U0167 Lost Communication With Vehicle Immobilizer Control Module  
U0168 Lost Communication With Vehicle Security Control Module  
U0169 Lost Communication With Sunroof Control Module  
U0170 Lost Communication With "Restraints System Sensor A"  
U0171 Lost Communication With "Restraints System Sensor B"  
U0172 Lost Communication With "Restraints System Sensor C"  
U0173 Lost Communication With "Restraints System Sensor D"  
U0174 Lost Communication With "Restraints System Sensor E"  
U0175 Lost Communication With "Restraints System Sensor F"  
U0176 Lost Communication With "Restraints System Sensor G"  
U0177 Lost Communication With "Restraints System Sensor H"  
U0178 Lost Communication With "Restraints System Sensor I"  
U0179 Lost Communication With "Restraints System Sensor J"  
U0180 Lost Communication With Automatic Lighting Control Module  
U0181 Lost Communication With Headlamp Leveling Control Module  
U0183 Lost Communication With Lighting Control Module  
U0184 Lost Communication With Radio  
U0185 Lost Communication With Antenna Control Module  
U0186 Lost Communication With Audio Amplifier  
U0187 Lost Communication With Digital Disc Player/Changer Module "A"  
U0188 Lost Communication With Digital Disc Player/Changer Module "B"  
U0189 Lost Communication With Digital Disc Player/Changer Module "C"  
U0190 Lost Communication With Digital Disc Player/Changer Module "D"  
U0191 Lost Communication With Television  
U0192 Lost Communication With Personal Computer  
U0193 Lost Communication With "Digital Audio Control Module A"  
U0194 Lost Communication With "Digital Audio Control Module B"  
U0195 Lost Communication With Subscription Entertainment Receiver Module  
U0196 Lost Communication With Rear Seat Entertainment Control Module  
U0197 Lost Communication With Telephone Control Module  
U0198 Lost Communication With Telematic Control Module  
U0199 Lost Communication With "Door Control Module A"  
U0200 Lost Communication With "Door Control Module B"  
U0201 Lost Communication With "Door Control Module C"  
U0202 Lost Communication With "Door Control Module D"  
U0203 Lost Communication With "Door Control Module E"  
U0204 Lost Communication With "Door Control Module F"  
U0205 Lost Communication With "Door Control Module G"  
U0206 Lost Communication With Folding Top Control Module  
U0207 Lost Communication With Movable Roof Control Module  
U0208 Lost Communication With "Seat Control Module A"  
U0209 Lost Communication With "Seat Control Module B"



U0210 Lost Communication With "Seat Control Module C"  
U0211 Lost Communication With "Seat Control Module D"  
U0212 Lost Communication With Steering Column Control Module  
U0213 Lost Communication With Mirror Control Module  
U0214 Lost Communication With Remote Function Actuation  
U0215 Lost Communication With "Door Switch A"  
U0216 Lost Communication With "Door Switch B"  
U0217 Lost Communication With "Door Switch C"  
U0218 Lost Communication With "Door Switch D"  
U0219 Lost Communication With "Door Switch E"  
U0220 Lost Communication With "Door Switch F"  
U0221 Lost Communication With "Door Switch G"  
U0222 Lost Communication With "Door Window Motor A"  
U0223 Lost Communication With "Door Window Motor B"  
U0224 Lost Communication With "Door Window Motor C"  
U0225 Lost Communication With "Door Window Motor D"  
U0226 Lost Communication With "Door Window Motor E"  
U0227 Lost Communication With "Door Window Motor F"  
U0228 Lost Communication With "Door Window Motor G"  
U0229 Lost Communication With Heated Steering Wheel Module  
U0230 Lost Communication With Rear Gate Module  
U0231 Lost Communication With Rain Sensing Module  
U0233 Lost Communication With Side Obstacle Detection Control Module  
U0234 Lost Communication With Convenience Recall Module  
U0235 Lost Communication With Cruise Control Front Distance Range Sensor  
U0300 Internal Control Module Software Incompatibility  
U0301 Software Incompatibility with ECM/PCM  
U0302 Software Incompatibility with Transmission Control Module  
U0303 Software Incompatibility with Transfer Case Control Module  
U0304 Software Incompatibility with Gear Shift Control Module  
U0305 Software Incompatibility with Cruise Control Module  
U0306 Software Incompatibility with Fuel Injector Control Module  
U0307 Software Incompatibility with Glow Plug Control Module  
U0308 Software Incompatibility with Throttle Actuator Control Module  
U0309 Software Incompatibility with Alternative Fuel Control Module  
U0310 Software Incompatibility with Fuel Pump Control Module  
U0311 Software Incompatibility with Drive Motor Control Module  
U0312 Software Incompatibility with Battery Energy Control Module A  
U0313 Software Incompatibility with Battery Energy Control Module B  
U0314 Software Incompatibility with Four-Wheel Drive Clutch Control Module  
U0315 Software Incompatibility with Anti-Lock Brake System Control Module  
U0316 Software Incompatibility with Vehicle Dynamics Control Module  
U0317 Software Incompatibility with Park Brake Control Module  
U0318 Software Incompatibility with Brake System Control Module  
U0319 Software Incompatibility with Steering Effort Control Module  
U0320 Software Incompatibility with Power Steering Control Module  
U0321 Software Incompatibility with Ride Level Control Module  
U0322 Software Incompatibility with Body Control Module  
U0323 Software Incompatibility with Instrument Panel Control Module  
U0324 Software Incompatibility with HVAC Control Module  
U0325 Software Incompatibility with Auxiliary Heater Control Module  
U0326 Software Incompatibility with Vehicle Immobilizer Control Module  
U0327 Software Incompatibility with Vehicle Security Control Module  
U0328 Software Incompatibility with Steering Angle Sensor Module  
U0329 Software Incompatibility with Steering Column Control Module  
U0330 Software Incompatibility with Tire Pressure Monitor Module  
U0331 Software Incompatibility with Body Control Module "A"  
U0400 Invalid Data Received  
U0401 Invalid Data Received From ECM/PCM  
U0402 Invalid Data Received From Transmission Control Module  
U0403 Invalid Data Received From Transfer Case Control Module  
U0404 Invalid Data Received From Gear Shift Control Module  
U0405 Invalid Data Received From Cruise Control Module  
U0406 Invalid Data Received From Fuel Injector Control Module  
U0407 Invalid Data Received From Glow Plug Control Module  
U0408 Invalid Data Received From Throttle Actuator Control Module  
U0409 Invalid Data Received From Alternative Fuel Control Module  
U0410 Invalid Data Received From Fuel Pump Control Module  
U0411 Invalid Data Received From Drive Motor Control Module  
U0412 Invalid Data Received From Battery Energy Control Module A

U0413 Invalid Data Received From Battery Energy Control Module B  
U0414 Invalid Data Received From Four-Wheel Drive Clutch Control Module  
U0415 Invalid Data Received From Anti-Lock Brake System Control Module  
U0416 Invalid Data Received From Vehicle Dynamics Control Module  
U0417 Invalid Data Received From Park Brake Control Module  
U0418 Invalid Data Received From Brake System Control Module  
U0419 Invalid Data Received From Steering Effort Control Module  
U0420 Invalid Data Received From Power Steering Control Module  
U0421 Invalid Data Received From Ride Level Control Module  
U0422 Invalid Data Received From Body Control Module  
U0423 Invalid Data Received From Instrument Panel Control Module  
U0424 Invalid Data Received From HVAC Control Module  
U0425 Invalid Data Received From Auxiliary Heater Control Module  
U0426 Invalid Data Received From Vehicle Immobilizer Control Module  
U0427 Invalid Data Received From Vehicle Security Control Module  
U0428 Invalid Data Received From Steering Angle Sensor Module  
U0429 Invalid Data Received From Steering Column Control Module  
U0430 Invalid Data Received From Tire Pressure Monitor Module  
U0431 Invalid Data Received From Body Control Module "A"